SERVICE MANUAL

GL-5


QUARTZ-LOCKED DIRECT DRIVE TURNTABLE



Contents

			Pag
1.	Specificat	tions	2
2.	Service Pr	ecautions	3
3.			_
4.	"How to	Operate" (Names & Functions)	3
5.	Block Dia	grams	
	5-(1)	Servomotor Control System	4
	5-(2)	IC802 Integrated Circuits and Waveforms	5
6.	Troublesh	ooting	
	6-(1)	Platter does not rotate	6
	6-(2)	Platter rotates at a high speed	6
	6-(3)	Rotation is not locked to the crystal oscillator frequency	7
7.	Parts Rep	lacement	
	7-(1)	Stylus Replacement	8
	7-(2)	Cartridge Replacement	
8.	Adjustme	nt Procedures	
	Servomot	for Control Section	
	8-(1)	Power Supply Voltage Check	9
	8-(2)	Lock Adjustment	_
	8-(3)	Brake Mechanism Adjustment	-
	Tonearm		
	8-(4)	Tonearm Height Adjustment	11
	8-(5)	Arm Lifter Height Adjustment	
	8-(6)	Overhang Adjustment	
	8-(7)	Headshell Angle Adjustment	
	8-(8)	Tracking Force Adjustment	
	8-(9)	Anti-skating Adjustment	
	8-(10)	Arm-rest Height Ajustment	
9.	Lubricatio	on	
10.		Views and Parts List	10
	10-(1)	Servomotor Control and Cabinet Ass'y	13
		Parts List with Specified Numbers for Designated Areas	
		Tonearm Ass'y	-
11.	Printed Ci	ircuit Board Ass'y and Parts List	10
		TXX-101 Servomotor Control P.C. Board Ass'y	16
		TSC-80F (GBS) Power Supply P.C. Board Ass'y	
12.		Diagram	
		laterials and Part Numbers	
		es List	
			- 7

CHECKING YOUR LINE VOLTAGE (For U.S. Military Market and Other Countries)
Before inserting the power plug, please check this setting to see that it corresponds with the line voltage in your area. If it doesn't, be sure to adjust the voltage selector switch to the proper setting before operating this equipment. The voltage selector switch is located either on the set's on the chassis. Simply insert a screw driver into the voltage selector switch and turn it in either direction while pressing slightly and in such a way that the desired voltage marked on the switch is positioned underneath the arrow marked on the rear panel or the chassis. The voltage selector switch accommodates up to three turns in either direction.

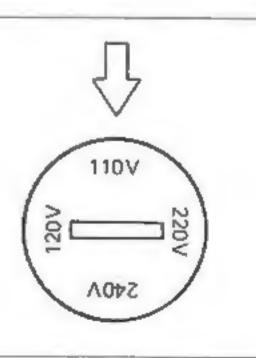

1. Specifications

Motor section

: 12-pole, 24-slot, DC type FG servomotor Motor

Drive system : Direct drive : 33-1/3 and 45 rpm Speeds

Wow and flutter : Less than 0.025 % (WRMS) : More than 63 dB (IEC-B) Rumble More than 73 dB (DIN-B)

: Integrated frequency generator Speed detection

Starting torque : More than 0.8 kg-cm Speed deviation : Within 0.004 %

: 0 % (with 100 g total tracking force) Load characteristics

Drift per hour : 0.0001 %/H :0% (± 10%) Power characteristics : 0.00005 %/°C Temperature characteristics : 31.2 cm diameter Platter : Within 1.6 seconds Quick stop time

Tonearm section

Effective length

: T.H. (Tracing-Hold system, static balance), New Gimbal Type

> Support : 245 mm

: +1°48' -1°31' Tracking error

Overhang : 15 mm

Tracking force range : 0 - 3 g (0.25 grams division, direct reading)

: 14.5 - 22 g (Headshell 10 g) Weight range (including headshell) : 39 - 51 mm (present to 43 mm) Height range

: Oil-damped arm elevator Mechanisms equipped Anti-skating system

Headshell mounting angle fine adjustment possible

Cartridge section (not provided on units for U.S.A., Canada and the U.K.)

: Moving Magnet (Cartridge body: MD-1025) Type

: 0.3 x 0.7 mil. diamond (DT-Z1TE) Stylus

Optimum tracking force : 2 grams : 3 mV (1 kHz) Output : 10 to 25 000 Hz Frequency response

: More than 25 dB (1 kHz) Separation (with test record TRS-1)

Load Resistance : 47 k ohms

: 10 x 10⁻⁶ cm/dyne (Dynamic) Compliance 30 x 10⁻⁶ cm/dyne (Static)

General

: 16.5 (H) x 48.1 (W) x 40.3 (D) cm (with cover closed) Dimensions

(6-1/2" x 18-15/16" x 15-7/8")

(Since the dimensions show only the design measurements, consideration is required when installing the unit in a limited space such as a rack.)

: 10.5 kg (23.1 lbs) Weight

(without corrugated cardboard case)

Power Specifications

Countries	Line Voltage & Frequency	Power Consumption
U.S.A. & CANADA	AC 120 V, 60 Hz	12 watts
CONTINENTAL EUROPE	AC 220 V, 50 Hz	12 watts
U.K. & AUSTRALIA	AC 240 V, 50 Hz	12 watts
U.S. MILITARY MARKET	AC 110, 120, 220, 240 V Selectable, 50/60 Hz	12 watts
OTHER AREAS	AC 110, 120, 220, 240 V Selectable, 50/60 Hz	12 watts

2. Service Precautions

- Be sure to place the unit on a level surface when adjusting motor rotation.
- 2. In servicing, do not use parts other than those specified.
- Be careful not to damage the motor shaft when repairing the motor unit.
- When the heatsink (including X820) is removed from the motor board to permit repair of the citcuit board, the transistor temperature may increase due to the lack
- of heat radiation. Attach an aluminum plate (approx. 100 (W) x 100 (D) x 1 (H) mm to the motor board).
- 5. If noise is produced when the knobs are turned or replaced, apply white grease or a small amount of silicon (50 000 unit, a quarter of a drop) on the knob shafts and the moving parts of the spring.

Note: Resin of the knob may be damaged if lubricating oils other than those specified are used.

3. Features

- Quartz-locked speed control system
- FG servomotor assures optimal torque (starting torque 0.8 kg·cm).
- Heavy aluminum die-cast platter of 2 kg cover included Inertia mass 280 kg-cm².
- Cartridge it elliptical stylus employed. (Z-1TE)
- Quick stop mecanism equipped.
- Highly sensitive, New Gimbal Support Tonearm with an effective length of 245 mm employed.

4. "How to Operate" (Names and Functions)



Turn the power switch ON. Stroboscope lamp lights.

Anti-skating knob

The anti-skating mechanism counteracts the centripetal force which pulls the stylus towards the center of the record while the record is playing; thereby reducing the pressure on the inner walls of the record groove.



Fig. 1

Arm lifter lever

Raise the lever to lift the tonearm, and lower it for the tonearm to descend gently.

Speed select/STOP knob

Turn the knob to align the index line on the knob with "33" or "45", depending on the rpm of the record you wish to play.


The platter stops within one revolution when the index line is aligned with the "STOP" position centered between the "33" and "45" positions.

Stroboscope pattern


A single stroboscope pattern is equipped on the rim of the platter. When the turntable rotates at either 33-1/3 or 45 rpm, the pattern will appear stationary to indicate that the turntable speed is correct.

5. Block Diagrams

5-(1) Servomotor Control System

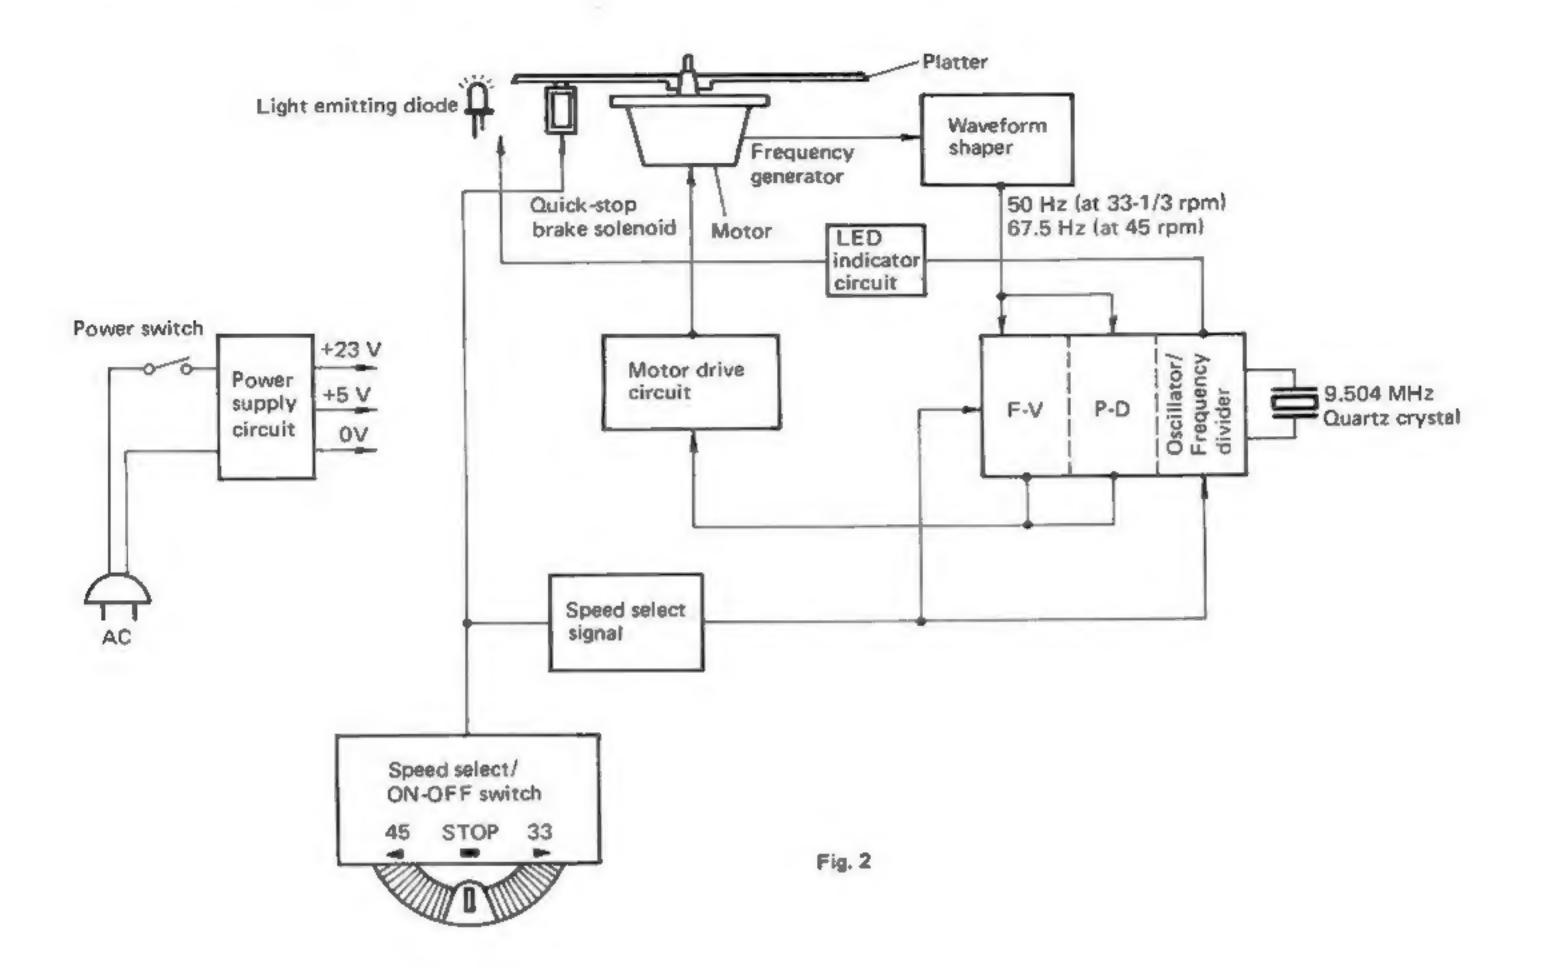

5-(2) IC802 Integrated Circuits and Waveforms

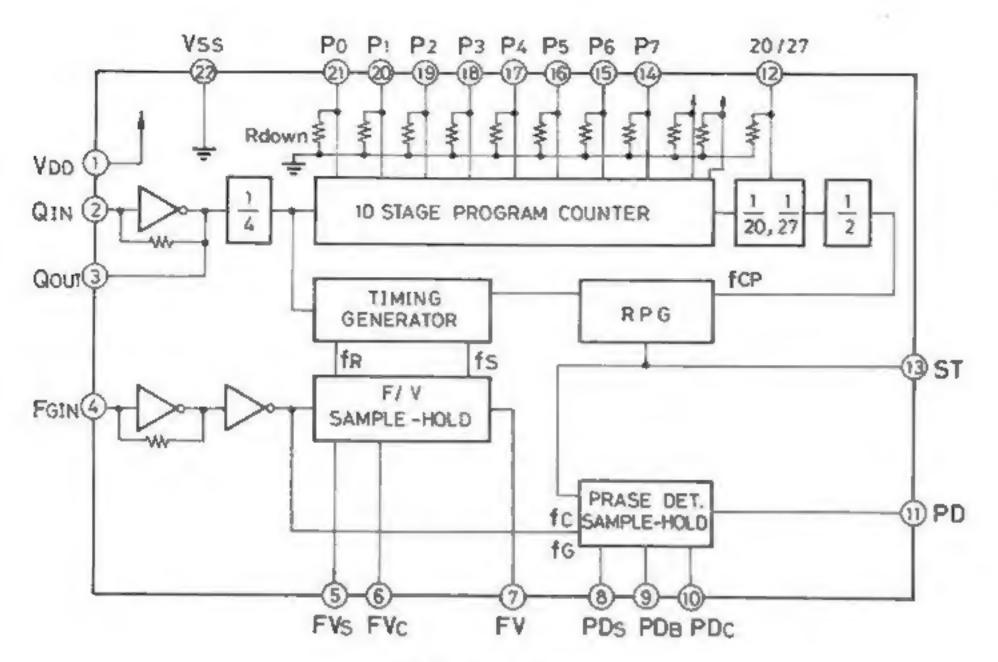

TOP VIEW VDD VSS Q IN P0 Q OUT P1 FG IN P2 **FVS** P3 SM 6415A-4 NPC 0000 **FVC** P4 FV **P5** PDS P6 PDB P7 PDC ST PD 20/27 DATE CODE

Fig. 3 Block Diagram

Fig. 4 Pins Location

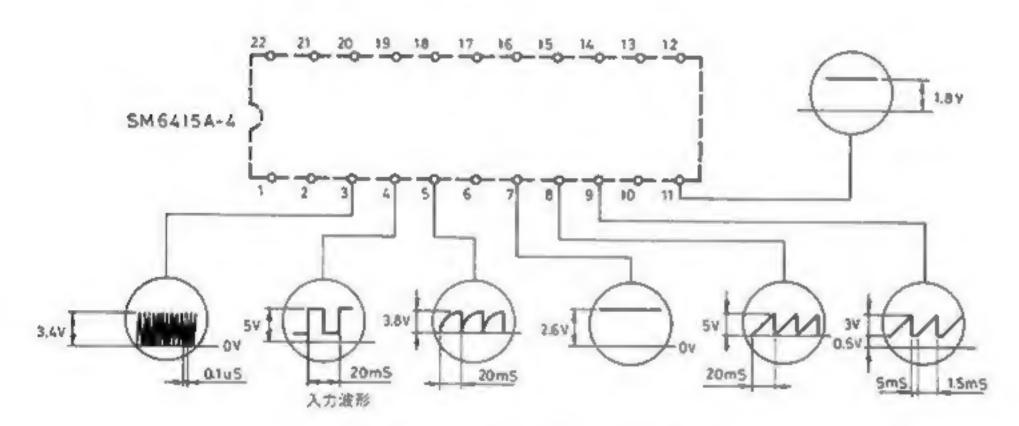


Fig. 5 Waveforms (Pin 1 through Pin 11)


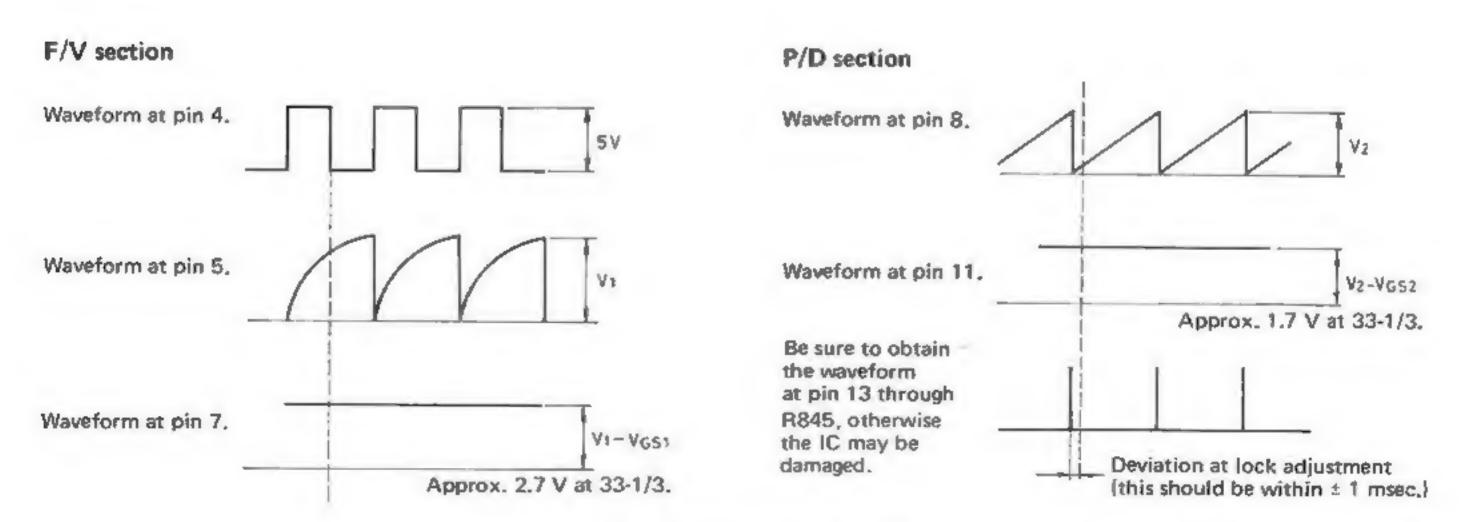



Fig. 6 Waveforms (F/V and P/D)

6. Troubleshooting


6-(1) Platter does rotate

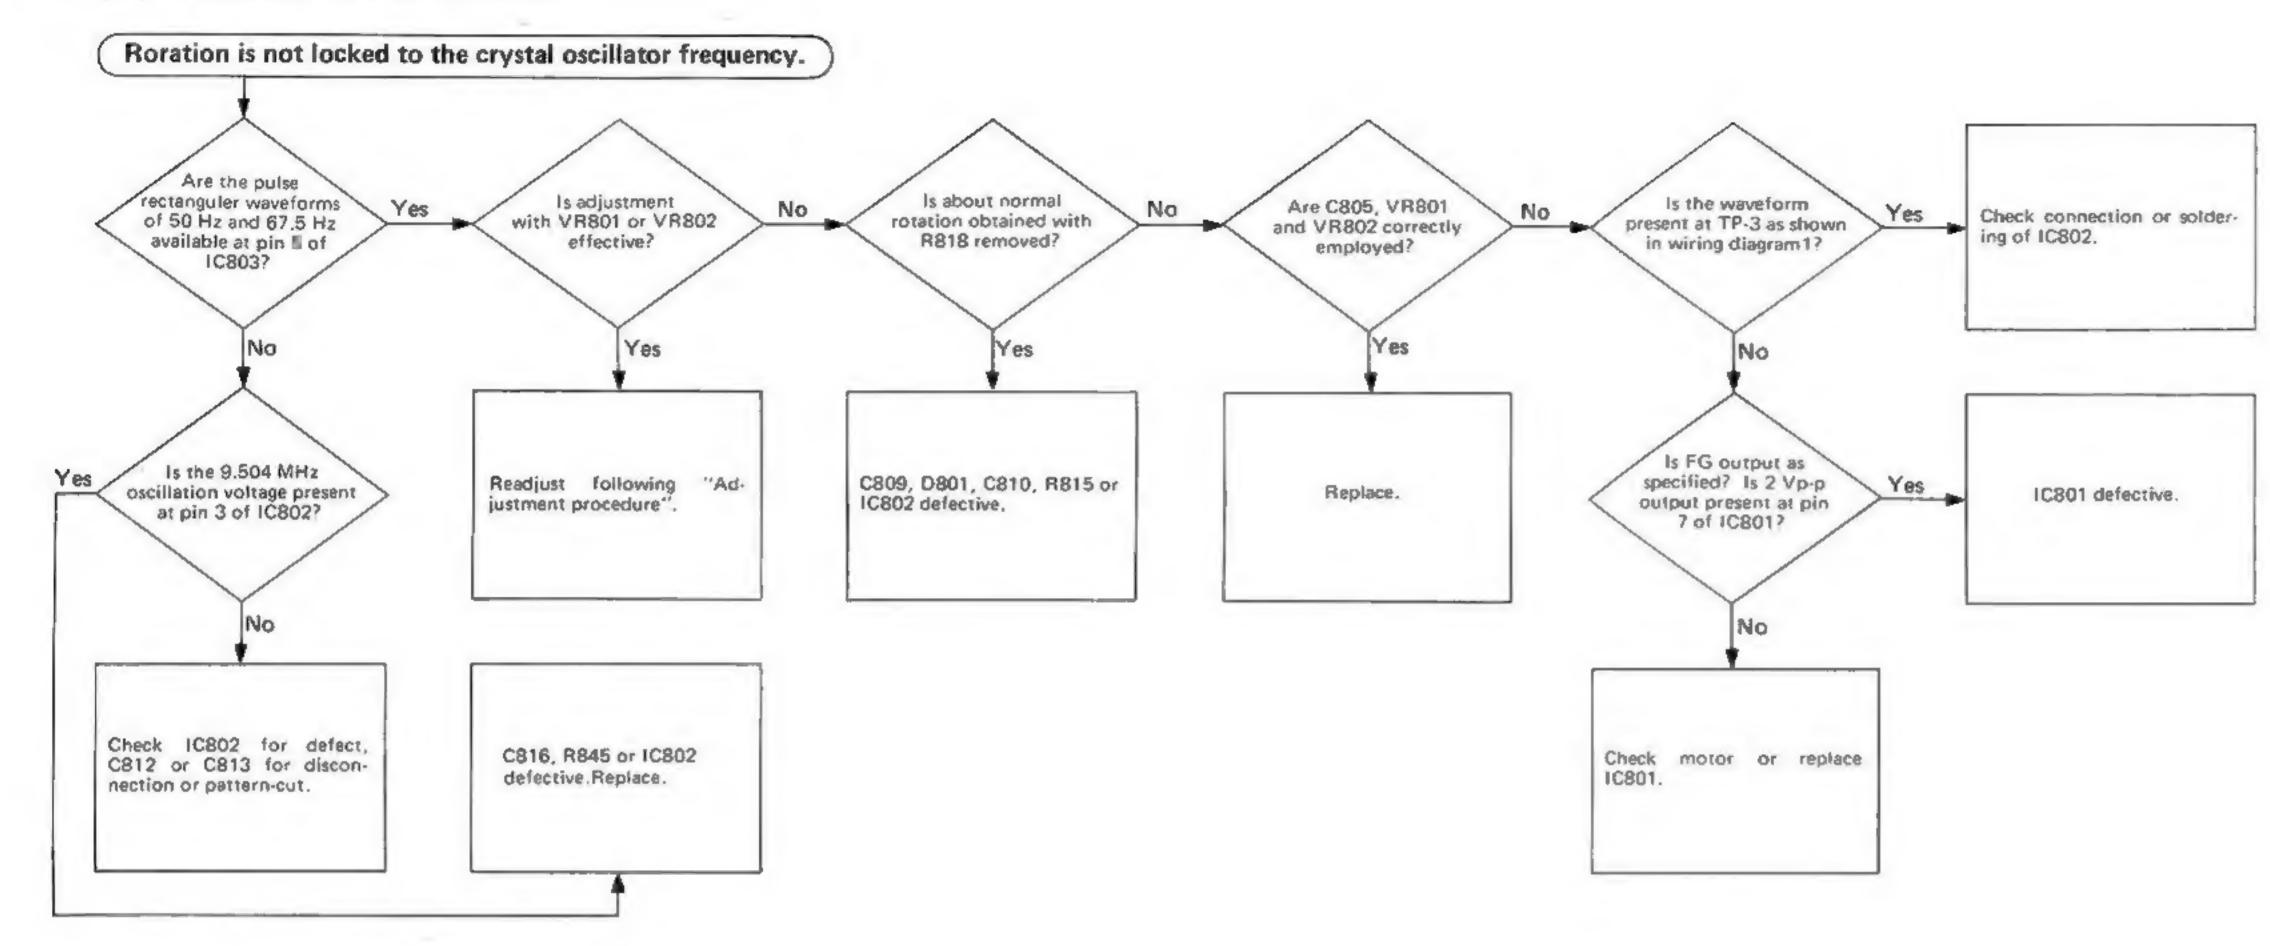

6-(2) Platter rotates at a high speed

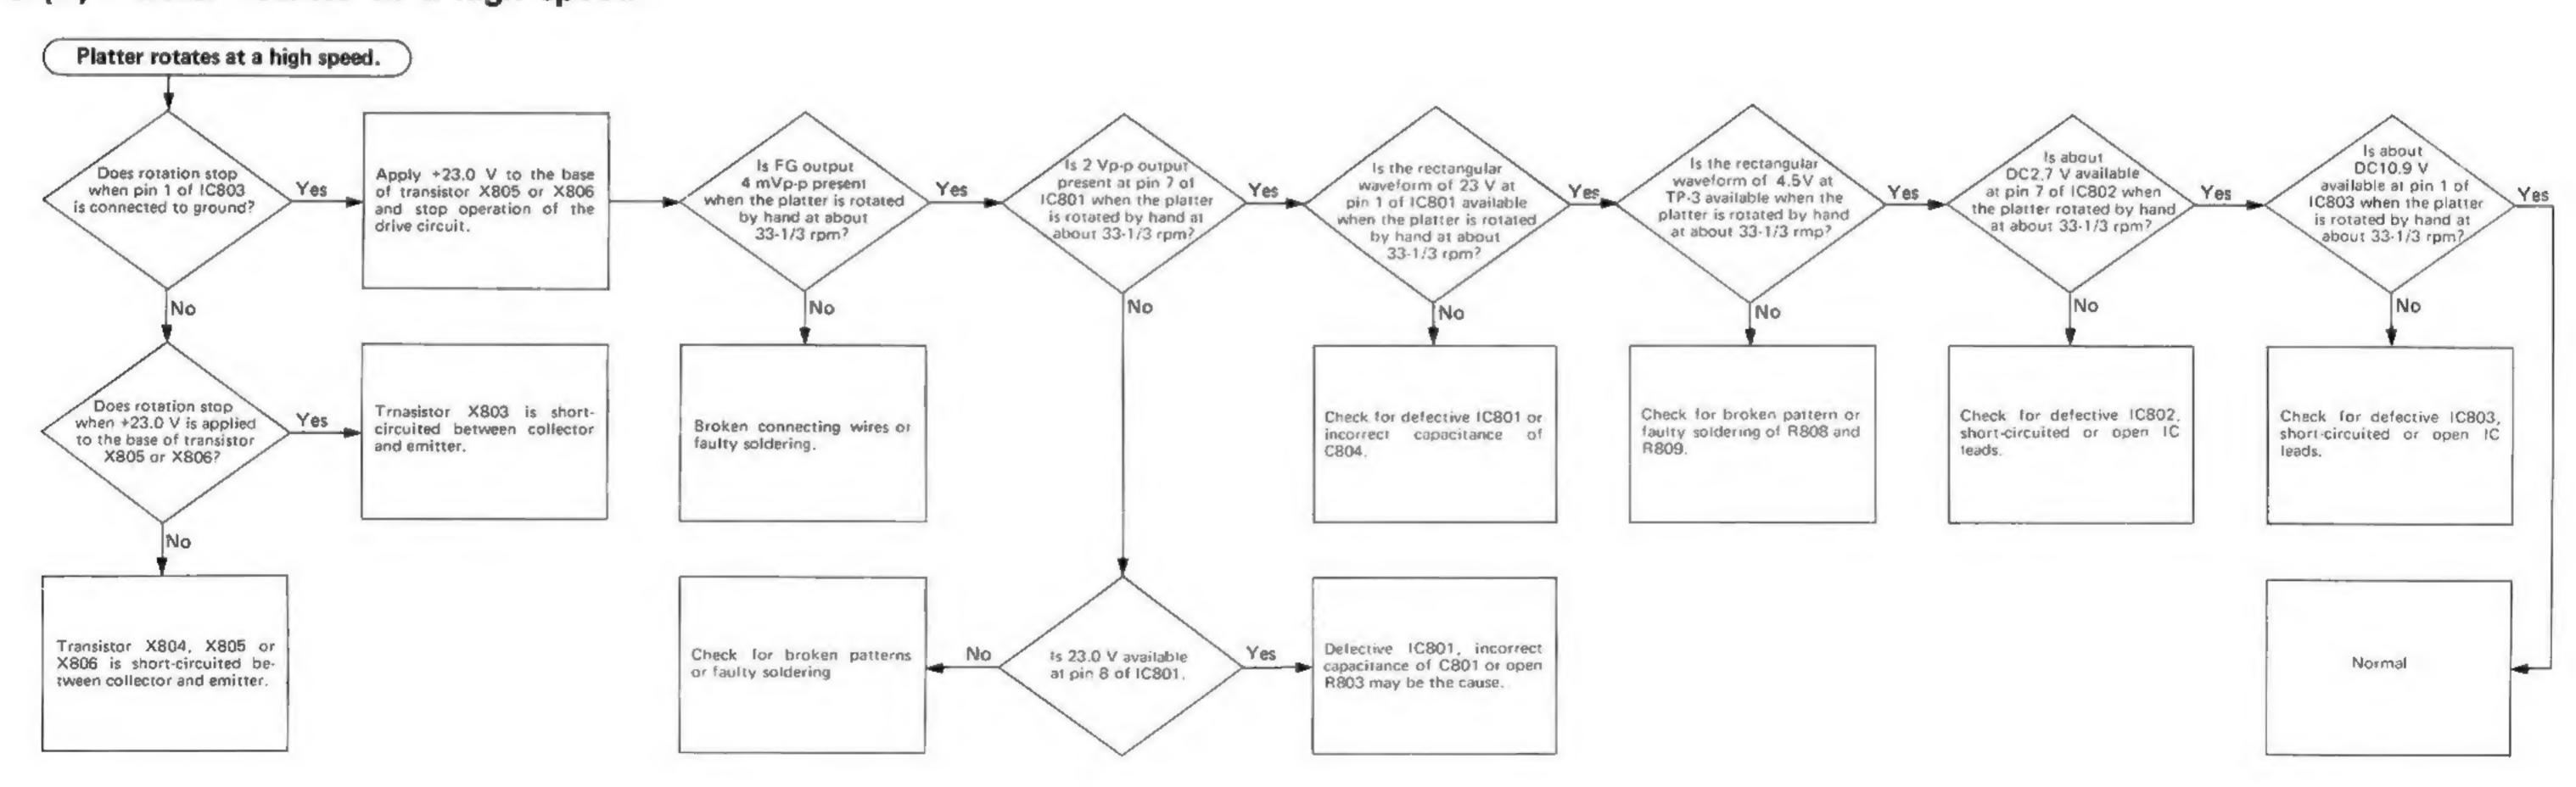

6-(3) Rotation is not locked to the crystal oscillator frequency

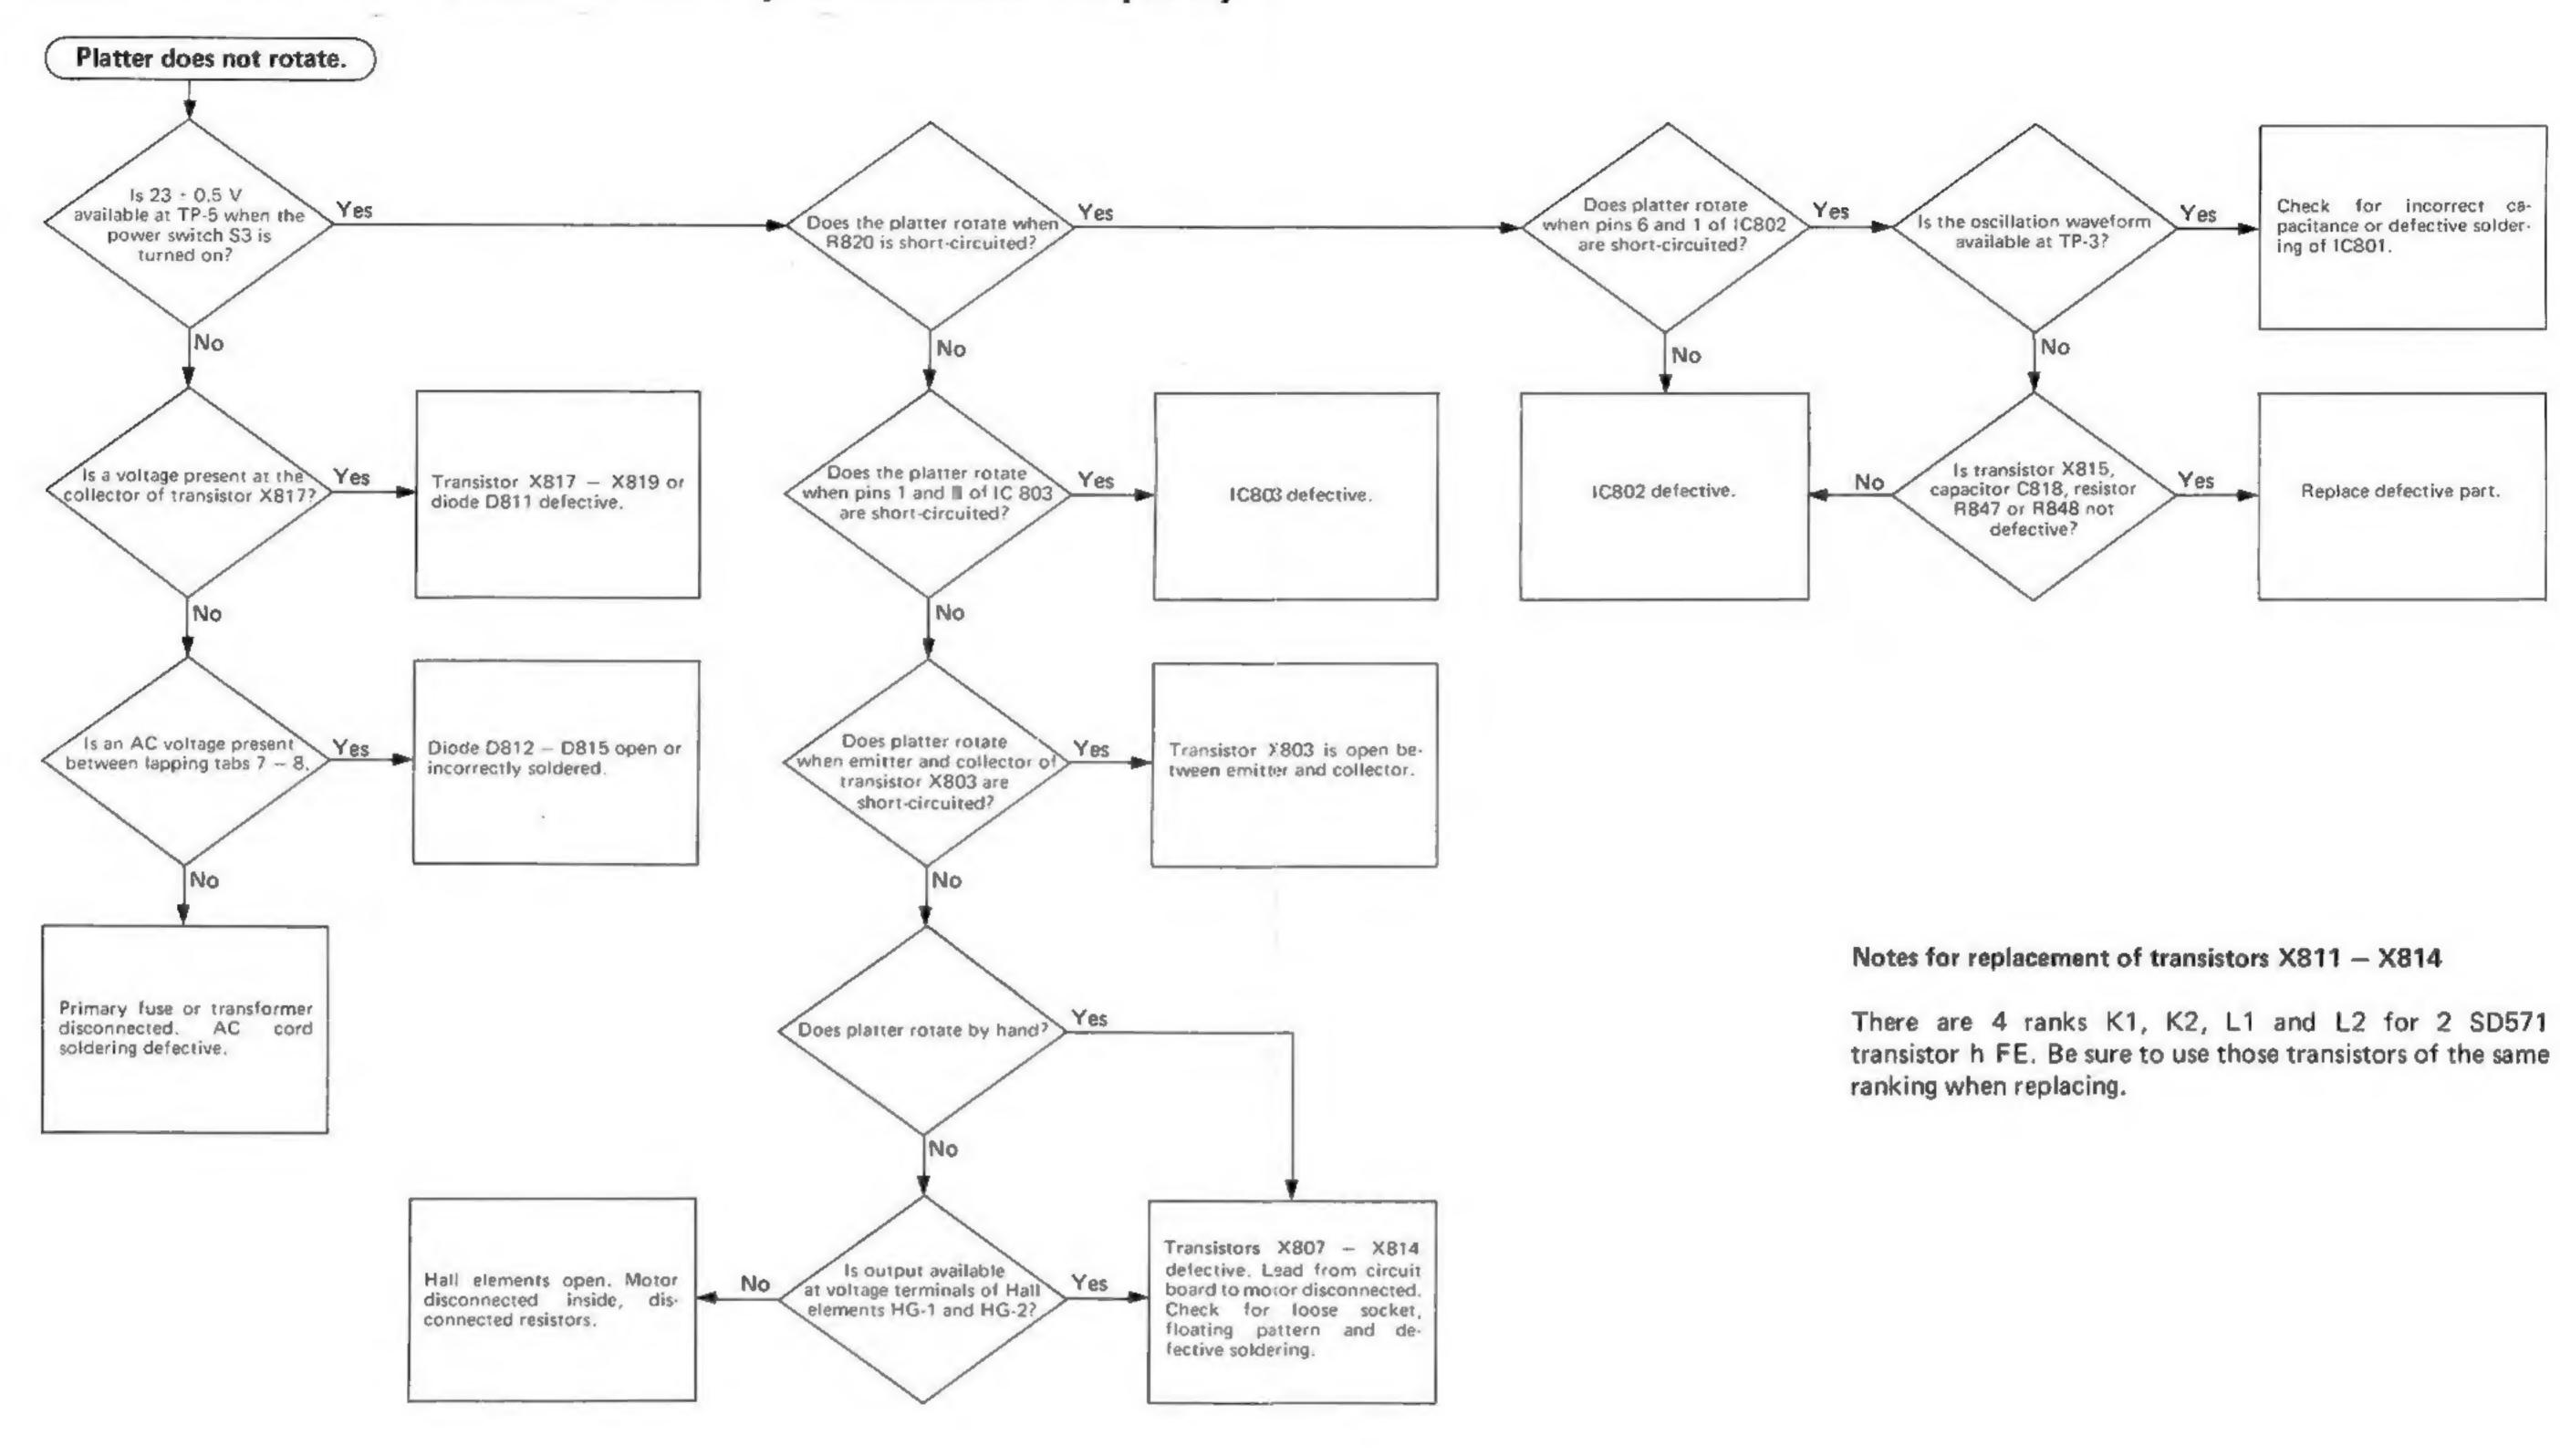

7. Parts Replacement

7-(1) Stylus Replacement

Replacement of the stylus can be easily made by simply inserting the stylus plug (A) into the jack (B) of the cartridge.

Service life of the stylus employed for this unit is generally as follows, varying, depending on the record conditions: (dirty record groove etc.).

Stereo LP record (30 cm) Approx, 300 - 500 hours

Styli are disposable items.

Therefore, it is recommended to buy a supply of styli when you buying the unit. When purchasing them, specify the DT-Z1TE (JVC, standard). Styli approximating DT-Z1TE are available on the market. Usage of such styli may result in a noisy and distorted sound reproduction. Be careful to avoid their usage.

Note: Cartridge is not provided on units for the U.S.A., Canada and the United Kingdom.

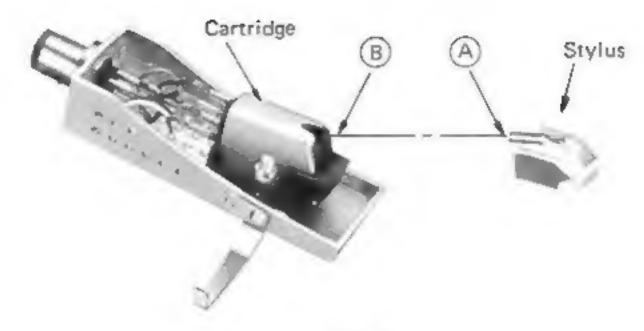


Fig. 7

7-(2) Cartridge Replacement

Removal and mounting of the headshell (Fig. 8)

Turn the connector nut in the direction of "A" to remove the headshell from the tonearm. Turn it in the direction of "B" for mounting the headshell.

Cartridge replacement (Fig. 9)

- 1. Remove the 2 screws securing the cartridge on the headshell.
- 2. Reinstall a cartridge onto the headshell.
- The four cartridge lead wires are colour-coded as follows: Connect them correctly.

White (+) L Blue (-) LE Red (+) R Green (-) RE


- Mount the cartridge properly onto the headshell and leave the set screws slightly loosened, then, after completing the "Overhang adjustment", tighten them firmly.
- After each cartridge replacement, be sure to perform tracking force and overhang adjustments.

Note: If a heavy cartridge or headshell is employed, "Zero balance" may not be obtained with the specified counterweight.

In this case, use an optional counterweight.

(SW-71, for cartridge of 14.5 ~ 22 g including head-shell)

(SW-37, for cartridge of 24 ~ 37 g including head-shell)

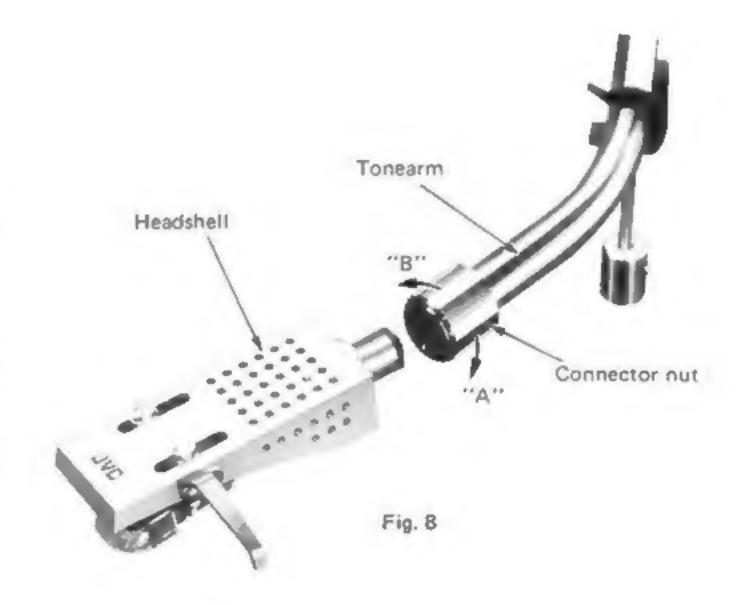

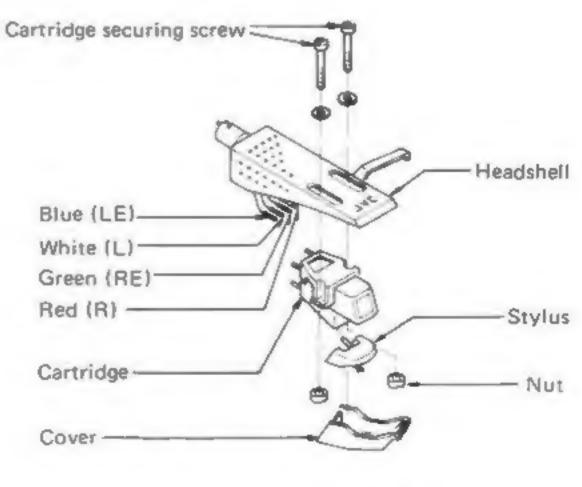


Fig. 9

8. Adjustment Procedures

Servomotor Control Section

8-(1) Power Supply Voltage Check

- 1. Disconnect the motor socket from the circuit board. Turn the power switch on. (Confirm that the rated voltage is applied to the unit.) Set the speed select switch to 33-1/3. Confirm that 23 ± 0.5 V DC is present at TP-5. If the voltage is deviate from that range, adjust with the semi-fixed resistor VR803 (1 k Ω).
- Confirm that the voltage difference at TP-5 is less than -1 V when the speed select/on-off switch is set at STOP.

8-(2) Lock Adjustment

1) With dual beam oscilloscope

 Connect the motor socket to the circuit board. Connect the dual beam oscilloscope to TP-3, TP-4. Obtain a turntable speed of 45 rpm by setting the speed select switch to 45, then adjust the semi-fixed resistor VR801 (100 kΩ) until the following waveforms are obtained.

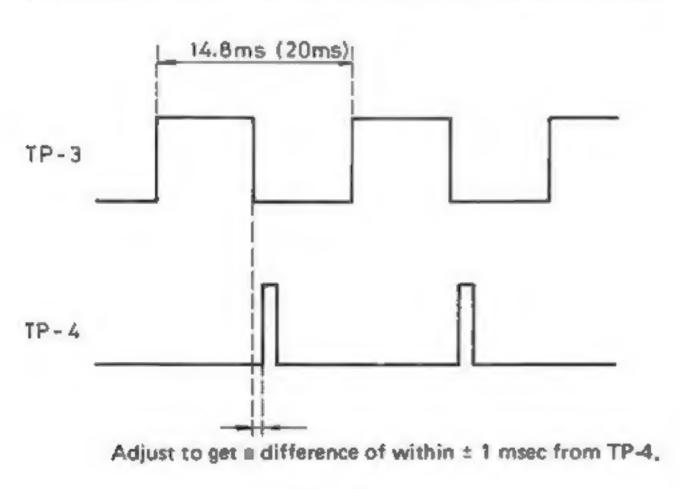


Fig. 10

2. Obtain a turntable speed fo 33-1/3 rpm by setting the speed select switch to 33-1/3, then adjust the semi-fixed resistor VR802 (47 k Ω) until the difference between TP-3 and TP-4 is within \pm 1 msec.

2) With single beam oscilloscope

Connect the single beam oscilloscope to TP-3, TP-4 as shown in Fig. 11 below. Adjust until the waveforms shown in Fig. 12 are obtained.



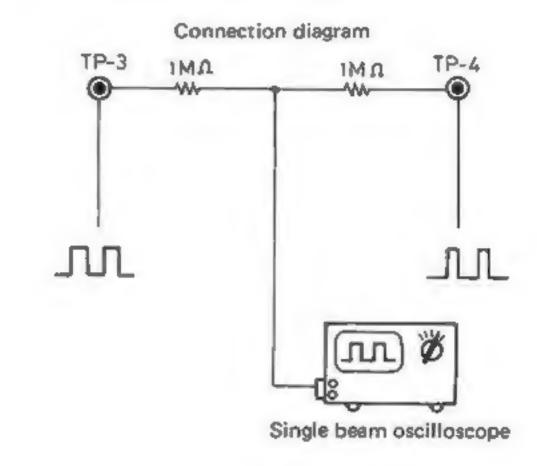


Fig. 11

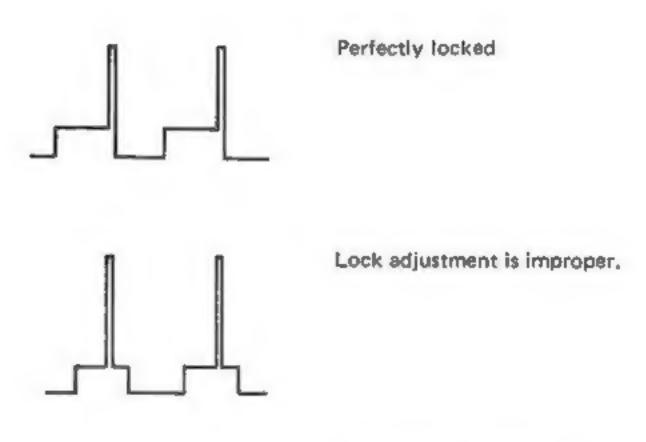

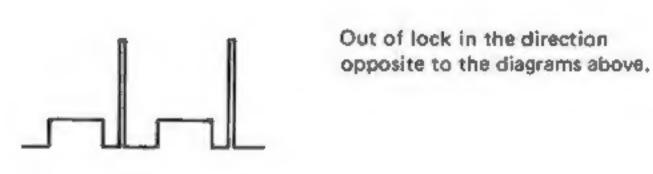

Out of lock

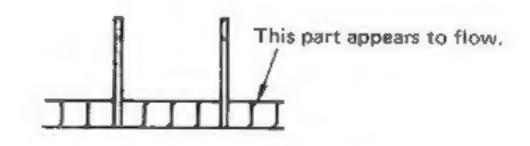


Fig. 12

8-(3) Brake Mechanism Adjustment

A brake lining is employed to stop the platter. A worn brake lining will result in the platter not stopping quickly or stopping with abnormal noise. If these troubles occur, adjust as described below.

The platter makes a noisy stop.

- Brush the friction surface of the brake lining, which contacts the platter, with a brush several times. Refer to Fig. 13.
- Carefully wipe the inner platter surface, which contacts the brake lining, with a soft cloth (such as gauze) dipped in alcohol.



When the brake lining is worn out.

- Completely remove the brake lining using thinner, then attach m new lining.
- Remove the paper covering from the adhesive rear side of the new brake lining, then attach the brake lining in the previously attached position.
- Glue the brake rod to the brake lining at the double lining position (as shown by arrow A in Fig. 15) with rubber cement.

When the solenoid coil is improperly positioned.

 Fit the brake lining inside the platter (The function is the same as mormal brake). Slightly loosen the 2 solenoid mounting screws, then adjust the solenoid coil position until the clearance between the solenoid coil end and the plunger head is 9 mm. (Refer to Fig. 14.) After the adjustment, be sure to re-tighten the screws firmly (Refer to Fig. 15).



When replacing the brake rod with a new one, turn the boss fully counterclockwise, then mount new brake rod.

After mounting the brake rod, gradually turn the boss clockwise (This narrows the clearance between the platter and the brake lining) until the contact sound of the brake lining and platter is eliminated when the platter is stopped by touching the stop switch.

Finally, confirm that the brake lining does not contact the platter, while the platter is rotating at the speed 33-1/3 or 45 rpm, by noting the sound and observing the stroboscope.

If the platter contacts the brake lining during rotation, turn the boss counterclockwise to increase the clearance between the brake lining and platter. After replacing the brake rod, be sure to apply a drop of silicone (in the order of million unit) to the part of the motor board stud which contacts the brake rod.

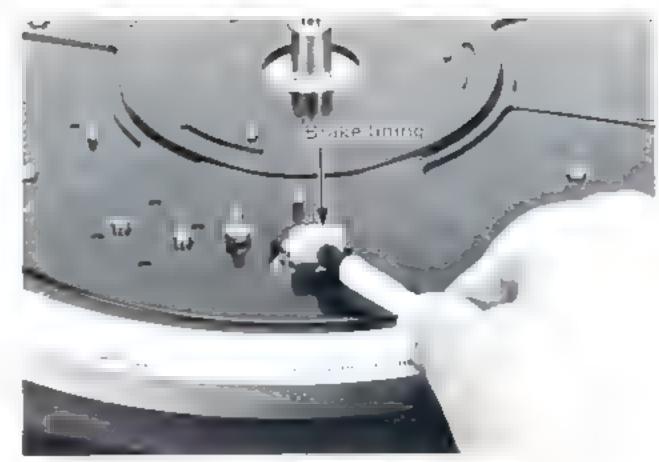


Fig. 13

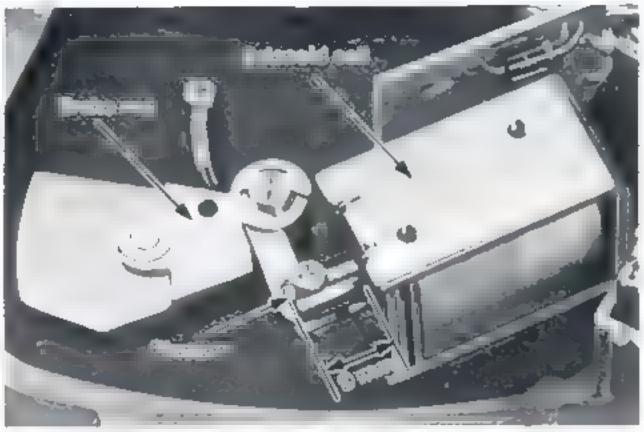


Fig. 14

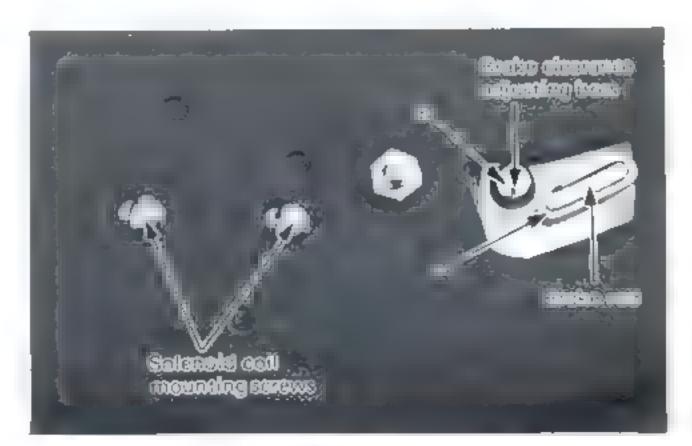


Fig. 15

Tonearm Section

Adjustment

The following adjustments should be performed only when replacing a cartridge or a headshell.

Otherwise, no adjustment is required.

Note: If necessary to replace a cartridge, usage of that headshell exclusive to this unit is recommended.

8-(4) Tonearm Height Adjustment

Mount the cartridge on the headshell. Loosen the 2 tonearm securing screws with a screwdriver, then adjust the tonearm height until the tonearm is horizontal, with the stylus tip at approximately the same level as the disc surface. Be sure to re-tighten the 2 tonearm securing screws after the adjustment. (No adjustment is necessary for European models which are equipped with the Z-1 S tonearm.

8-(5) Arm Lifter Height Adjustment

When the tonearm is raised with the arm lifter lever, optimum clearance between the stylus and the disc surface is 8 mm. If no clearance exists between the tonearm and arm lifter during play, proper disc play will not be obtained. With the arm lifter raised, loosen the lifter bracket securing screw with a screwdriver. Adjust the arm lifter height until the clearance between the stylus tip and the disc surface is 8 mm.

8-(6) Overhang Adjustment

An overhang indicator convenient for overhang adjustment is provided for the model QL-5.

Fit the overhang indicator onto the turntable spindle with the arrow-shaped end pointing toward the tonearm pivot. Move the tonearm and place the stylus over the overhang indicator. (Be sure, the tonearm is in the up position.) One digit on the overhang indicator represents 1 mm overhang. Slide the cartridge adjusting the overhang until the stylus points to 15 mm (marked by "\(^*\)" between 10 and 20 mm). Be sure to secure the cartridge to the headshell after the adjustment. Errors within 2 – 3 mm are negligible from the practical point of view.

8-(7) Headshell Angle Adjustment

If the stylus tip is not perpendicular to the surface of the disc, loosen the lock screws on the lower side of the tonearm, with a small screwdriver, then adjust the headshell until it is parallel with the platter. Be sure to re-tighten the screws after the adjustment is completed. For reference purposes, measurement by eye is sufficient.

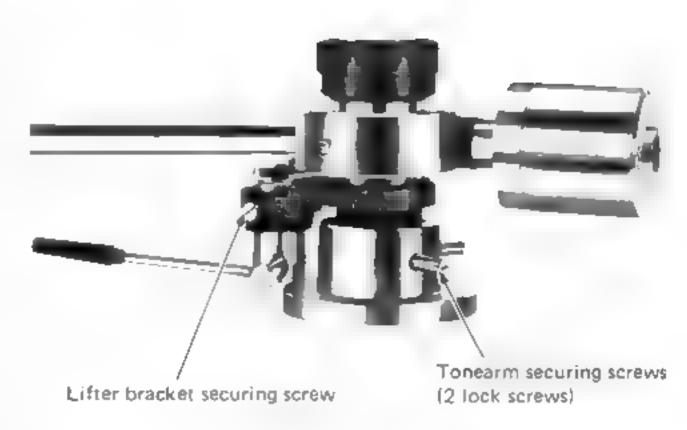


Fig. 16

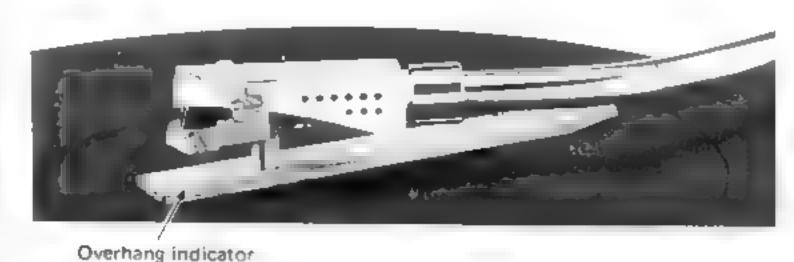


Fig. 17


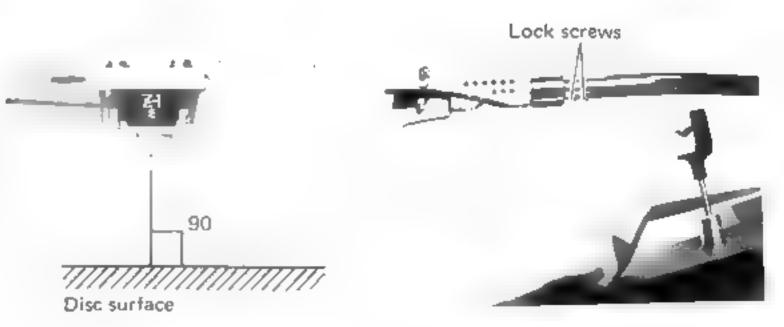


Fig. 18

8-(8) Tracking Force Adjustment

- 1. Turn the anti-skating knob until the "0" mark on the anti-skating dial is aligned with the index line.
- 2. Place a record on the platter.
- 3. Remove the stylus protector.
- Release the tonearm clamp.
- Turn the counterweight until the tonearm maintains
 balance with the stylus tip on the same level as the record surface, (Zero balance)
- 6. Return the tonearm to the rest and clamp it.
- Holding the counterweight at the adjusted position, turn the tracking force dial until the "O" mark is aligned with the index line.
- Now, turn the counterweight until "2" on the dial is aligned with the index line since the optimum tracking force with this turntable is 2 grams.

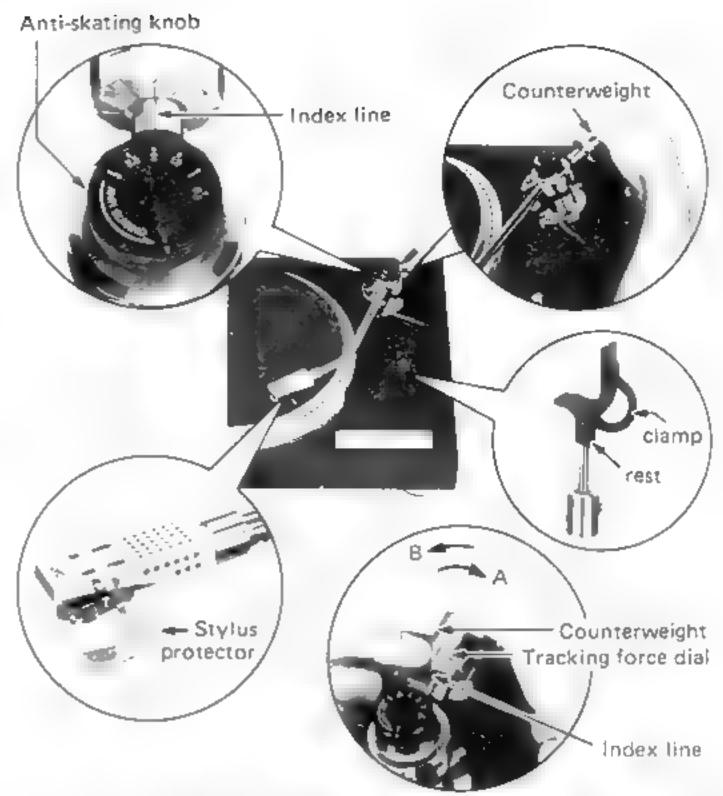

Turning the counterweight in the "A" direction decreases the tracking force, whereas in the "B" direction increases the tracking force. Turning the tracking force dial only has no effect on the tracking force.

Fig. 19

8-(9) Anti-skating adjustment

Turn the anti-skating adjustment knob until the same value as the optimum tracking force ("2") is aligned with the index line.

8-(10) Arm-rest Height Adjustment

Adjust the arm-rest height until the tonearm in horizontal when the tonearm clamped on the rest. Be sure to retighten the arm-rest securing screw after the adjustment.

Note: Confirm that the arm lift point does not touch the arm lifter when the tonearm is clamped on the rest and the arm lifter lever is raised.

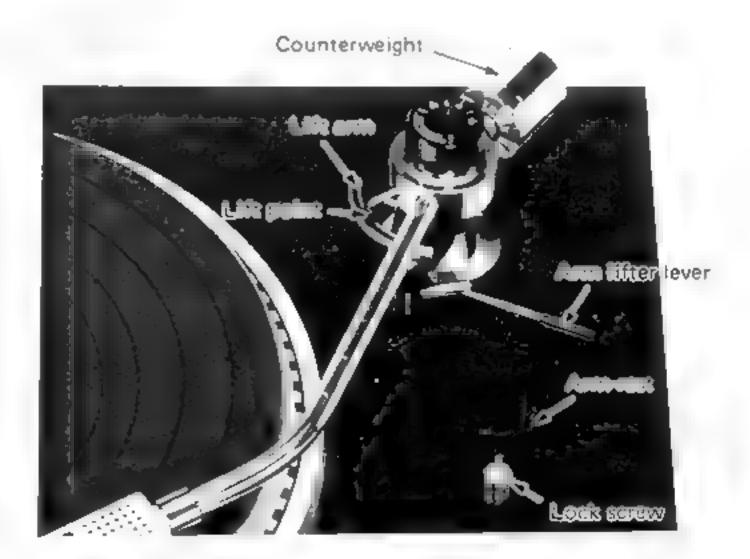



Fig. 20

9. Lubrication

The direct drive motor employd in this unit does not require the lubrication.

10. Exploded Views and Parts List

10-(1) Servomotor Control and Cabinet Ass'y

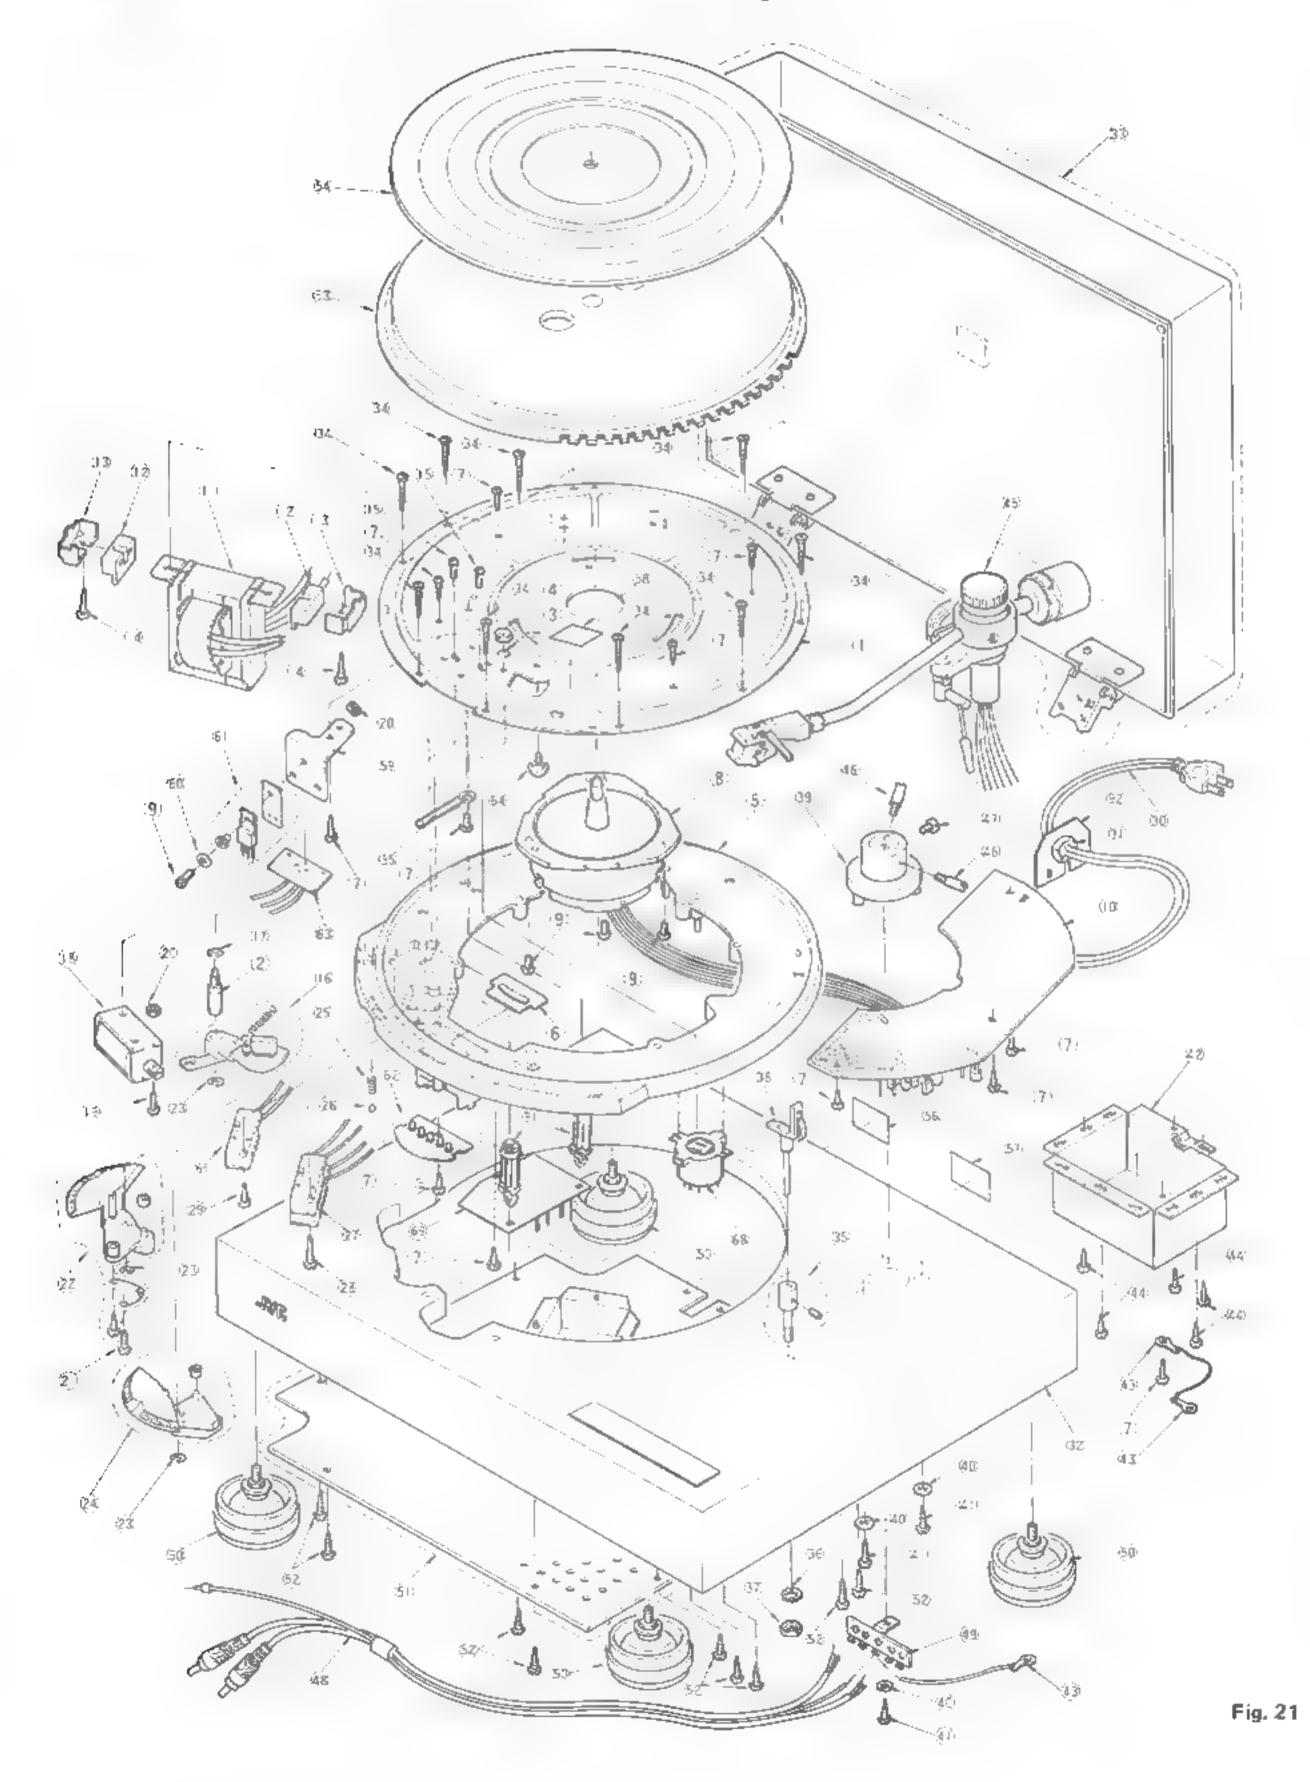

QL-5 No. 2428

Parts List

Item No.	Part Number	Description	Item No.	Part Number	Description
1	See page 15.	Motor Board	36	WBS6000N	Washer
2	E65005-001	Shaft	37	NTS6000Z	Nut
3	WLS4000M	Washer	38	E60741-001	Arm Rest Ass'y
4	NTB4000S	Nut	39	E34600-001	Tonearm Base
5	E10203-002	Base Ass'y	40	Q03091-111	Washer
6	E61983-002	Color Screen	41	SBSB3010Z	Tapping Screw
7	SBSB3008Z	Tapping Screw	42	E34772-002	Shield Cover
8	M935A	Motor Ass'y	43	52868-3	Terminal Lug
9	SPST3008ZS	Screw	44	SBSA3012Z	Tapping Screw
10	See page 15.	Servomotor Control	45	See page 15.	Tonearm Ass'y
		P.C. Board Ass'y	46	E6144-001	Screw
11	See page 15.	Power Transformer 🛆	47	SPSP2606N	**
12	E61132-001	Cusion	48	E03724-001	Signal Cord Ass'y
13	E61133-001	Holder	49	QML1010-051	Lug Strip Ass'y
14	SBSB4016N	Tapping Screw	50	See page 15.	Foot Ass'y
15	LPSP3005NS	Screw	51	E22517-001	Bottom Board Ass'y
16	E61407-001	Brake Lever Ass'y		E22516-001	Bottom Board
17	REE5000	"E" Typed Washer		E65007-001	Protector
18	E61409-001	DC Solenoid		SBSB3008Z	Tapping Screw
19	LPSP3012ZS	Ass'y Screw	52	\$B\$A3016Z	10
20	NNZ3000S	Nut	53	E22512-001	Platter
21	E61980-001	Screw	54	See page 15.	Platter Covering
22	E35281-001	Knob (Power Switch) Ass'y	55	E50670-005	Wire Clamp
23	REE3000	"E" Typed Washer	56	See page 15.	Rating Plate
24	E65011-001	Knob Ass'y	57	E61998-001	Seal Paper
25	E60488-001	Spring	58	E61651-001	Caution Label
26	G41505-5	Steel Ball	59	E61466-001	Heatsink (2SD325)
27	QSM1V01-003	Micro Switch	60	WSS3000N	Washer
28	SBSB3030Z	Tapping Screw	61	2SD325(D,E)	Power Transistor
29	SBSB3016Z	**	62	See page 15.	P.C. Board Ass'y
30	See page 15.	Power Cord with Plug	63	See page 15.	**
31	See page 15.	Cord Clamp	64	E49447-002	Shaft
32	See page 15.	Cabinet Ass'y	65	See page 15.	P.C. Board Ass'y
33	E35263-002	Dust Cover Ass'y	66	See page 15.	Micro Switch 🛆
	ED20946-005	Dust Cover	67	See page 15.	Fuse Label
	E61992-001	Hinge Ass'y	68	See page 15.	Voltage Selector 🛆
	SDSP3008M	Screw	69	See page 15.	Power Supply P.C. Board
34	MSSP3102M	7.6			Ass'y △
35.	E61339-002	Rest Stand Ass'y	70	See page 15.	Fastener


NOTE A : SAFETY PARTS

10-(2) Parts List with Specified Numbers for Designated Areas

Item No.	Description	For U.S.A. and Canada	For Europe	For U.K.	For Australia	For U.S. Military Market and Other Countries
1	Motor Board	E22511-001	E22511-003	E22511-003	E22511-003	E22511-002
10,62, 63,65	Servomotor Control P.C. Board Ass'y	TXX-101B (U.S.A.)	TXX-101E	TXX-101E	TXX-101E	TXX-101D
		TXX-101C (Canada)				
11	Power Transformer 🛆	E03032-24C	E03032-24E	E03032-24EBS	E03032-24E	E03032-24D
30	Power Cord with Plug 🗥	QMP1200-244	QMP3910-244	QMP9017-007BS	QMP2500-200	QMP1200-244
31	Cord Clamp	QHS3876-162	A37897	A37897	A37897	A37897
32	Cabinet Ass'y	DL-ED92769	DL-ED92769	DL-ED92770	DL-ED92769	DL-ED92769
45	Tonearm Ass'y	ARM-524	MP-186S	ARM-524	ARM-524	MP-186S
50	Foot Ass'y	E35280-002	E35280-001	E35280-001	E35280-001	E35280-001
54	Platter Covering	E22719-002	E22719-001	E22719-001	E22719-001	E22719-001
56	Rating Plate & Label	E35064-011 (U.S.A.)	E35339-004E	E35339-006BS	E35339-005A	E35339-003P (U.S. Military)
		E49273-012 (Canada)				E35339-002U (Other Countries)
66	Micro Switch 🛆	QSM1V01-023	Q\$M1V12-101	QSM1V12-101BS	QSM1V12-101	QSM1V01-023
67	Fuse Label	E61378-008 (U.S.A.)	_		_	-
		E61801-008 (Canada)				
68	Voltage Selector △	_	_	_	_	QSR0085-001
69	Power Supply P.C. Board Ass'y 🛆		TSC-80F	TSC-80GBS	TSC-80F	_
70	Fastener	- i	E35422-001	E35422-001	E35422-001	_
91	Fastener	_	E35422-001	E35422-001	E35422-001	_
92	Stopper Bracket	E65431-001	_	_		_


NOTE A : SAFETY PARTS

10-(3) Tonearm Ass'y

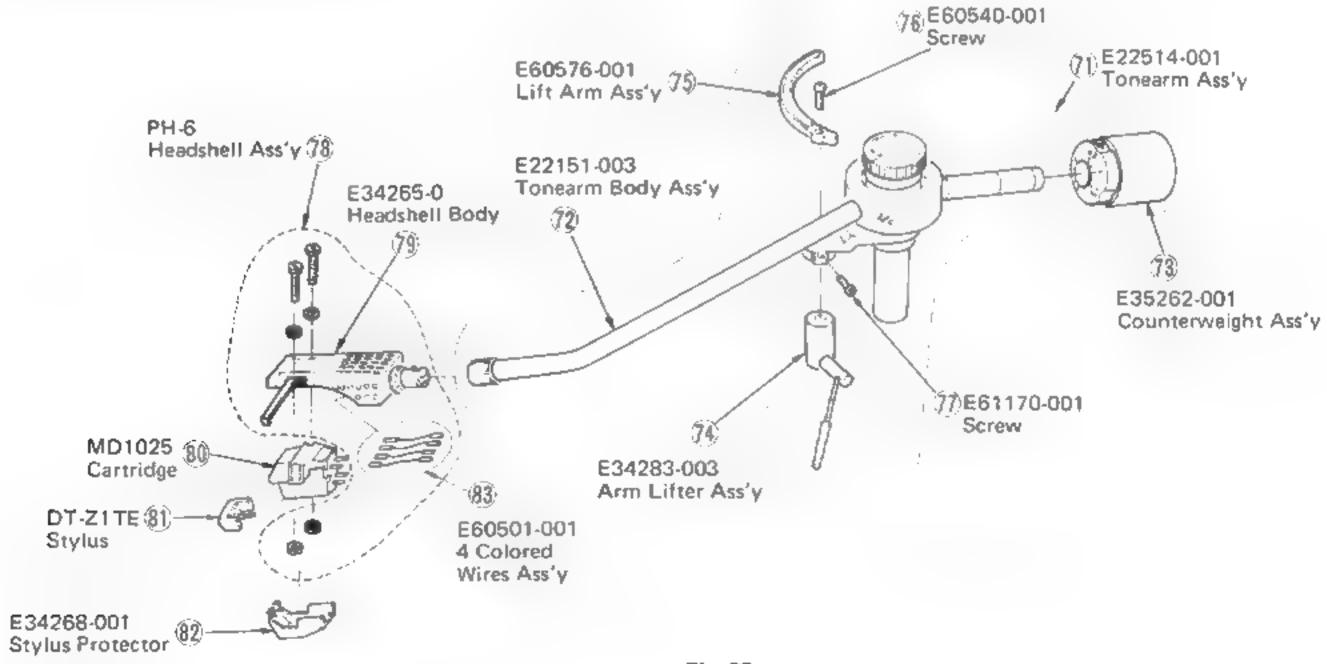

11. Printed Circuit Board Ass'y and Parts List

11-(1) TXX-101 Servomotor Control P. C. Board Ass'y

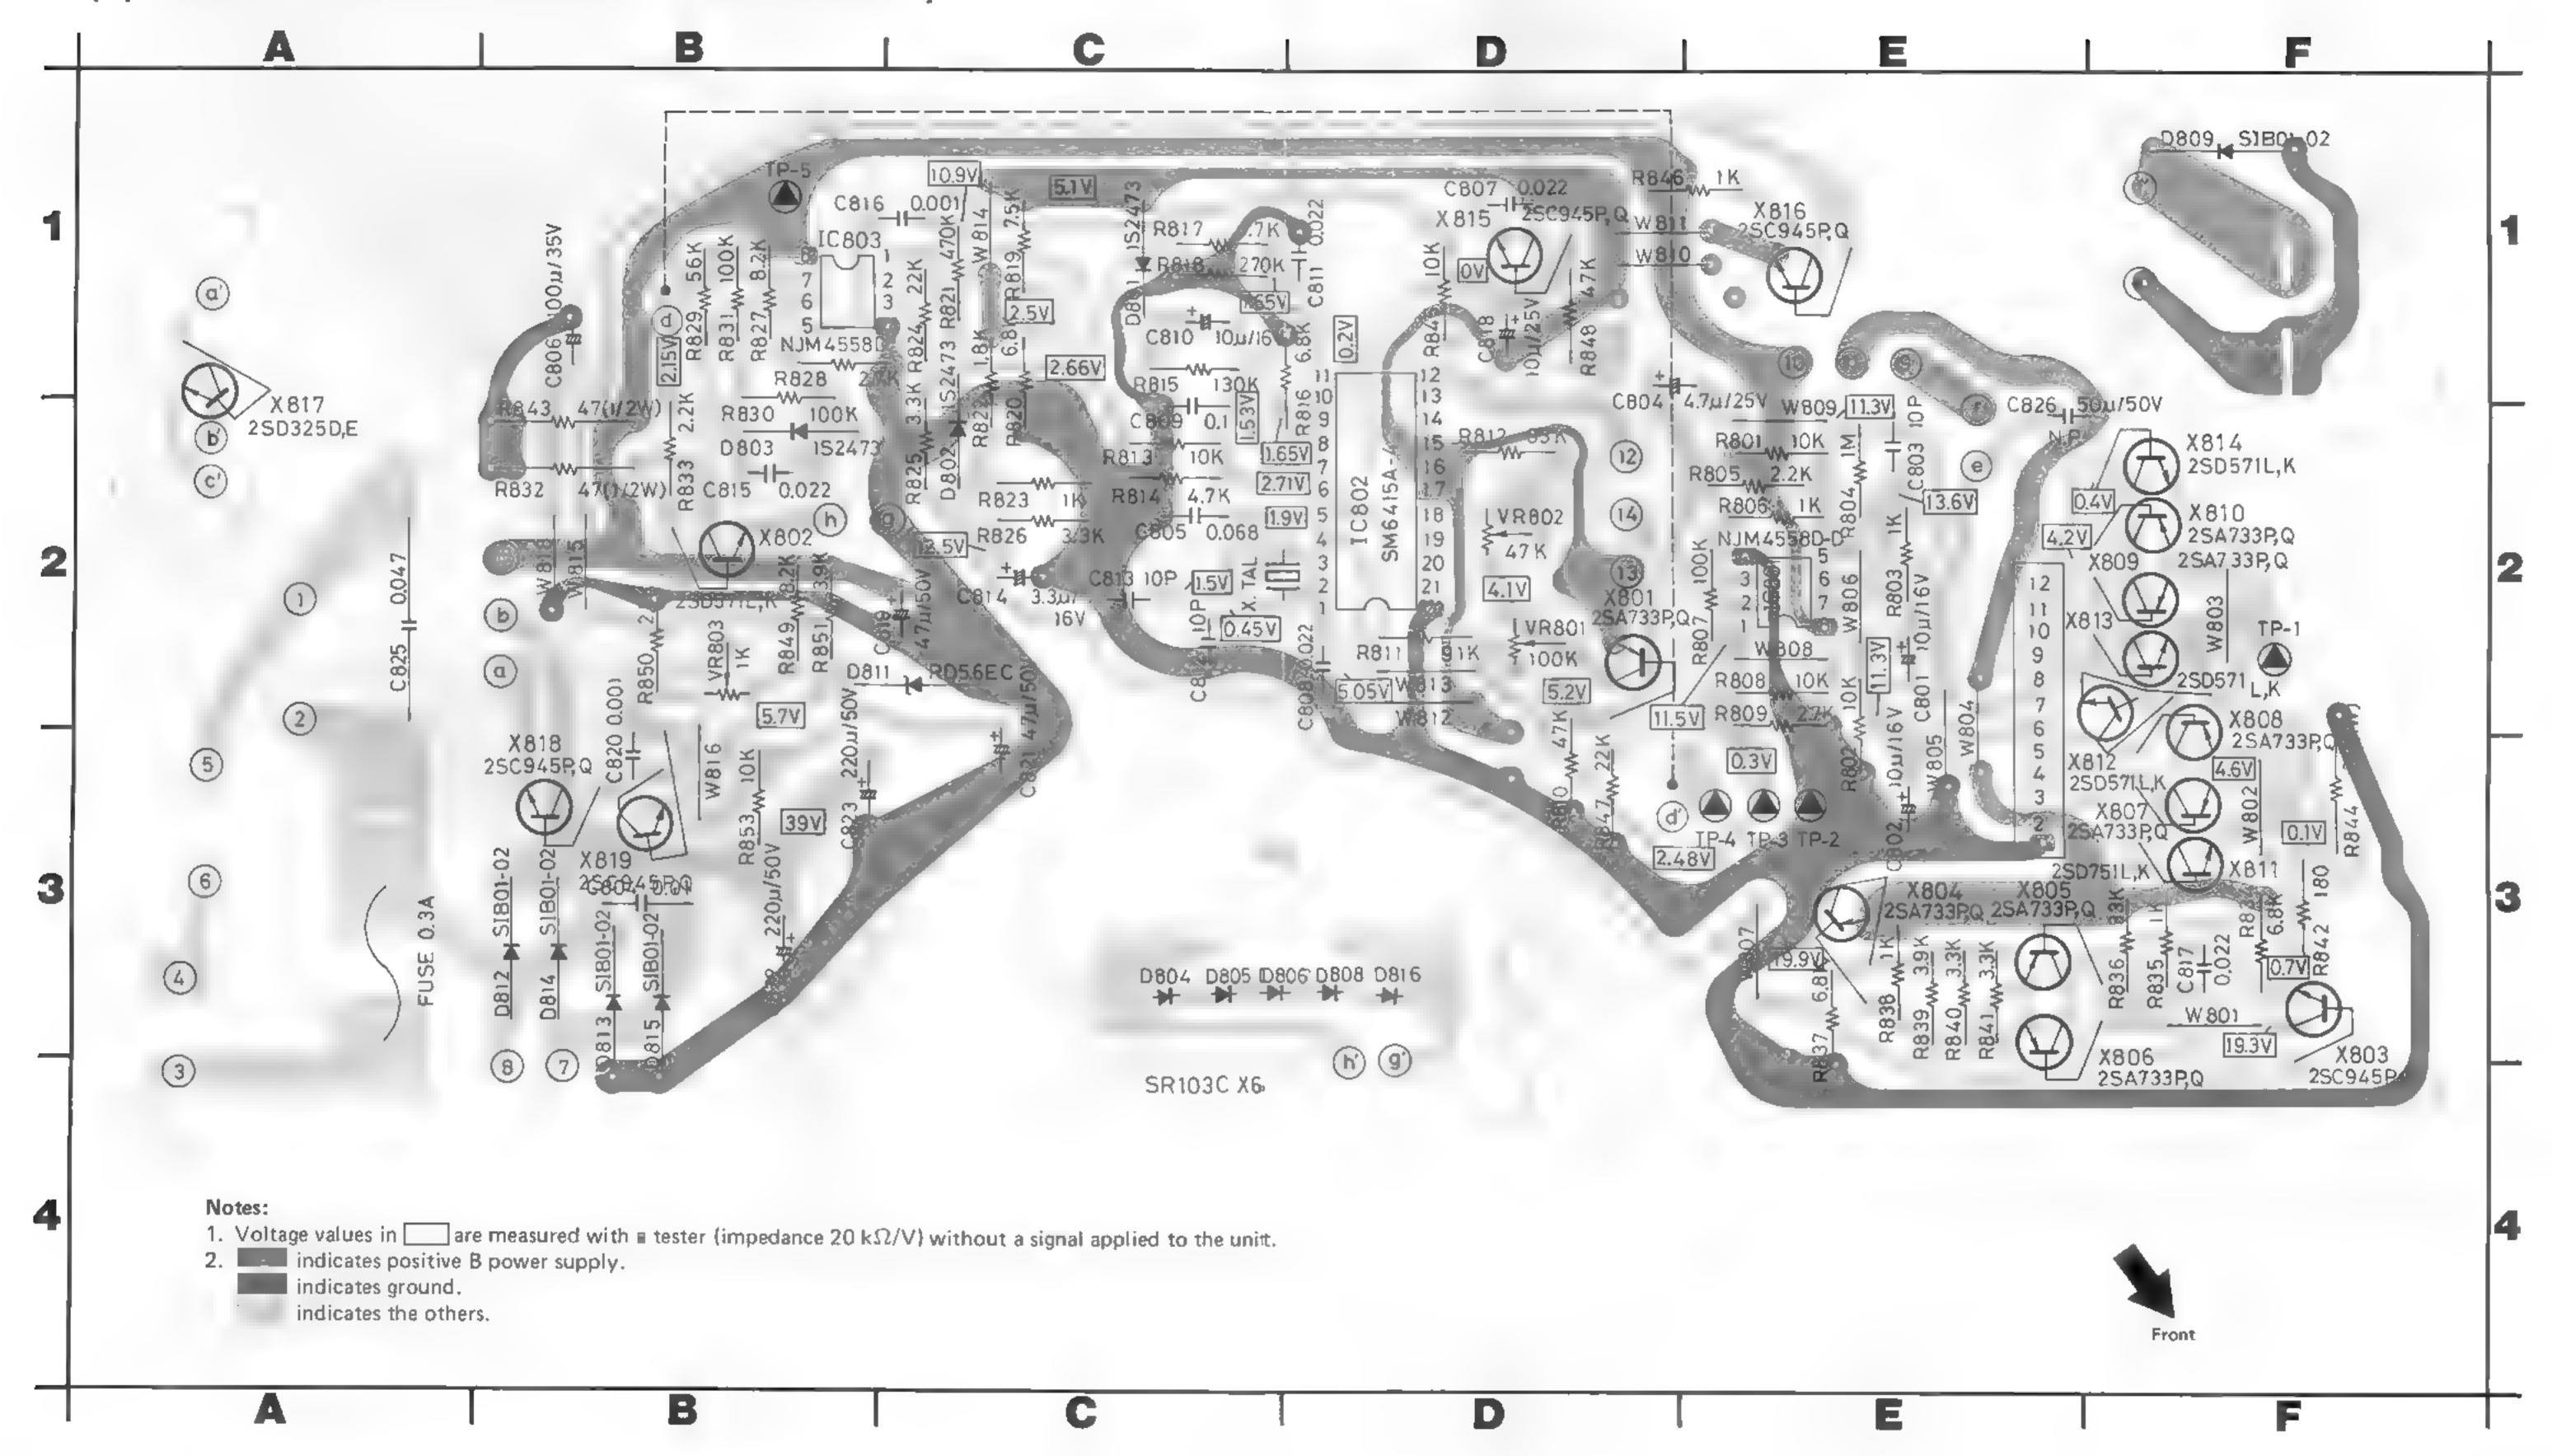

The assembly varies according to the area where the units is sold. Refer to the table shown on page 20.

Transistors

Idam No.	Part Number	Ratio	ng		
Item No.		Pc	fT	Description	Maker
X801	2SA733 (P, Q)	250 mW	180 MHz	Silicon	Mitsubishi
X802	2SD571 (L, K)	800 mW	110 MHz	27	N.E.C.
X803	2SC945 (P, Q)	250 mW	250 MHz	21	Mitsubishi
X804	2SA733 (P, Q)	**	180 MHz	**	11
X805	2SA733 (P, Q)	39	##	11	14
X806	2SA733 (P, Q)	· ir	**	**	
X807	2SA733 (P, Q)	**	30	"	11
X808	2SA733 (P, Q)	**		**	"
X809	2SA733 (P, Q)	11	. Ir	17	**
X810	2SA733 (P, Q)	**	"	**	4+
X811	2SD571 (L, K)	800 mW	110 MHz	**	N.E.C.
X812	2SD571 (L, K)	**	**	**	11
X813	2SD571 (L, K)	**	2.0	PT	**
X814	2SD571 (L, K)	14	44	**	**
X817	2SD325 (D, E)	10 W	8 MHz	**	Sanyo
X818	2SC945 (P, Q)	250 mW	250 MHz	**	Mitsubishi
X819	2SC945 (P, Q)	**	**	**	**

Integrated Circuits

Item No.	Part Number	Rating	Description	Maker
IC801 IC802 IC803	NJM4558D-D SM6415A-4S NJM4558D		I.C. "	Shin Nihon Musen Nihon Precision Circuits Shin Nihon Musen

Diodes

Item No.	Part Number	Rating	Description	M Maker
D801	1S2473		Silicon	Toyo Dengu
D802	1S2473		A F	"
D803	1S2473		**	er
D804	SR103C		L.E.D.	N.E.C.
D805	SR103C		14	11
D806	SR103C		11	
D807	VD1121		Varistor	**
D808	SR103C		L.E.D.	**
D809	SIB01-02		Silicon	Fuji Denki
D811	RD5, 6EC		Zener	N.E.C.
D812	SIB01-02		Silicon	Fuji Denki
D813	SIB01-02		**	"
D814	SIB01-02		f p	**
D815	SIB01-02		"	**
D816	SR103C		L.E.D.	N.E.C.
D817	1S2473		Silicon	Toyo Dengu

Capacitors

Item No.	Part Number	Ratin	g	Description
C801	QEW61CA-106Z	1 μΕ	16 V	Electrolytic
C802	QEW61CA-106Z	11	**	
C803	QCF31HP-102Z	1000 pF	50 V	Ceramic
C804	QEW61EA-475Z	4.7 μF	25 V	Electrolytic
C805	QFM31HJ-823Z	0.082 μF	50 V	Mylar
C806	QEW51VA-107Z	100 μF	35 V	Electrolytic
C807	QCM31HK-223Z	0.022 μF	50 V	Mylar
C808	QCF31HP-223Z	**	**	Ceramic
C809	QFM31HK-104Z	0.1 μF	**	Mylar
C810	QEW61CA-106Z	10 μF	16 V	Electrolytic
C811	QCF31HP-223Z	0.022 μF	50 V	Ceramic
C812	QCT25UJ-100Z	10 pF		**
C813	QCT25UJ-100Z	4.0		"
C814	QEB51EM-335	3.3 µF	25 V	L.L.C. Electrolytic
C815	QCF31HP-223Z	0.022 μF	50 V	Ceramic
C816	QCF31HP-102Z	1000 pF	**	22
C817	QCF31HP-223Z	0.022 μF	**	27
C819	QEW51HA-476Z	47 μF	50 V	Electrolytic
C820	QCF31HP-102Z	1000 pF	12	Ceramic
C821	QEW51HA-476Z	47 μF	17	Electrolytic
C822	QEW51HA-227	220 μF	**	7.6
C823	QEW51HA-227	**		
C824	QCF12HP-103	0.01 μF	500 V	Ceramic
C825	QFH72BM-473M	0.047 μF	AC 125 V	M. Mylar

Resistors

Item No.	Part Number Ratin		ng	Description	
R801	QRD141J-103SY	10 kΩ	1/4 W	Carbon	
R802	QRD141J-103SY	21	**	**	
R803	QRD141J-102SY	1kΩ	**	**	
R804	QRD141J-105SY	1 ΜΩ	44	**	
R805	QRD141J-222SY	2.2 kΩ			
R806	QRD141J-102SY	1kΩ	**	**	
R807	QRD141J-104SY	100 kΩ	**	14	
R808	QRD141J-103SY	10 kΩ	**	**	
R809	QRD141J-272SY	2.7 kΩ	**	**	
R810	QRD141J-473SY	47 kΩ	**	H	
R811	QRD141J-114SY	110 kΩ	**	**	
R812	QRD141J-363SY	36 kΩ	11	P P	
R813	QRD141J-103SY	10 kΩ	**	**	
R814	QRD141J-472\$Y	$4.7 \text{ k}\Omega$	**	**	
R815	QRD141J-134SY	130 kΩ	0	rr	
R816	QRD141J-682SY	6.8 kΩ	**	11	
R817	QRD141J-472SY	$4.7 \text{ k}\Omega$	21	**	
R818	QRD141J-334SY	330 kΩ	24	***	
R819	QRD141J-162SY	1.6 kΩ	**	**	
R820	QRD141J-202SY	2.0 kΩ	**	**	
R821	QRD141J-124SY	120 kΩ	**	**	
R822	QRD141J-182SY	1.8 kΩ	**	**	
R823	QRD141J-102SY	1 kΩ	22	2.6	
R824	QRD141J-223SY	22 kΩ	**	**	

Resistors

tem No.	Part Number	Rati	ing	Description
3825	QRD141J-332SY	3.3 kΩ	1/4 W	Carbon
R826	QRD141J-332SY	**	**	**
R827	QRD141J-822SY	8.2 kΩ	FF	P P
3828	QRD141J-272SY	2.7 kΩ		14
3829	QRD141J-563SY	56 kΩ	**	**
3830	QRD141J-104SY	100 kΩ	- 11	e e
3831	QRD141J-104SY	re	**	ez .
8832	QRG129J-470	47 Ω	1/2 W	Uninflammable O.M.F.
8833	QRD141J-222SY	2.2 kΩ	1/4 W	Carbon
₹834	QRD141J-682SY	6.8 kΩ	11	**
1835	QRD141J-102SY	1kΩ	**	
1836	QRD141J-333SY	33 kΩ	**	**
837	QRD141J-682SY	6.8 kΩ	**	**
1838	QRD141J-102SY	1 kΩ	4.0	**
1839	QRD141J-392SY	3.9 kΩ	**	F P
840	QRD141J-332SY	3.3 kΩ	,,	+ p
841	QRD141J-332SY	F F	**	**
842	QRD141J-181SY	180 Ω	14	**
843	QRG129J-470	47 Ω	1/2 W	Uninflammable O.M.F.
844	QRX017J-2R7S	2.7 Ω	1 W	Uninflammable M.F.
845	QRD141J-103SY	10 kΩ	1/4 W	Carbon
846	QRD141J-102SY	1kΩ	2.9	**
849	QRD141J-822SY	8.2 kΩ	**	2.0
850	QRD141J-272SY	2.7 kΩ	**	**
851	QRD141J-392SY	3.9 kΩ		**
852	QRD141J-102SY	1 kΩ		
853	QRD141J-103SY	10 kΩ	**	ri .
R801	QVZ3501-104	100 kΩ		Variable
R802	QVZ3501-473	47 kΩ		**
R803	QVP4A0B-102	1 kΩ		**

Others

tem No.	Part Number	Rating	Description	
	E03732-012A E04300-003 E41541-021 E45524-001 E61466-003 E65125-001		Plug Quartz Crystal Bushing Contact Clip Heatsink Solenoid Coil	


TXX-101 with specified numbers for designated areas

Item No.	Description	TXX-101B for U.S.A.	TXX-101C for Canada	TXX-101D for U.S. Military Market and Other Countries	TXX-101E for Australia, U.K. and European Countries
C825	M. Mylar Capacitor	QFH72BM-473M (0.047 μF/AC 125 V)	QFA72BM-473M (0.047 μF/AC 125 V)	QFH53AM-473M (0.047 μF/AC 1 kV)	
	P.C. Board (Plain)	E22518-002	E22518-002	E22518-005	E22518-003
	Fuse (Secondary).△	_	_	_	QMF51A2-R50(BS) (0.5 AT)
	Fuse Clip	-	_	_	E48965-002
	Fuse Label	-	_	_	E61381-004

NOTE A : SAFETY PARTS

11-(2) TSC-80F(GBS) Power Supply P. C. Board Ass'y

Note: The assembly varies according to the area where the unit is sold. Refer to the table shown below.

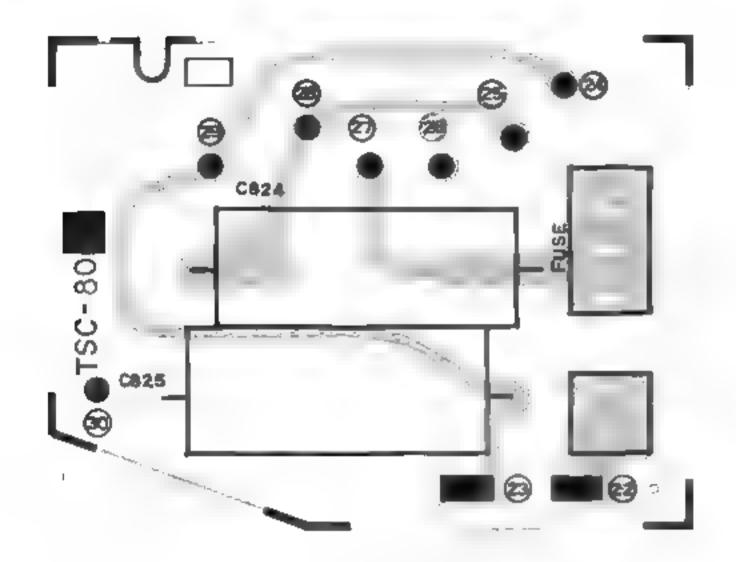

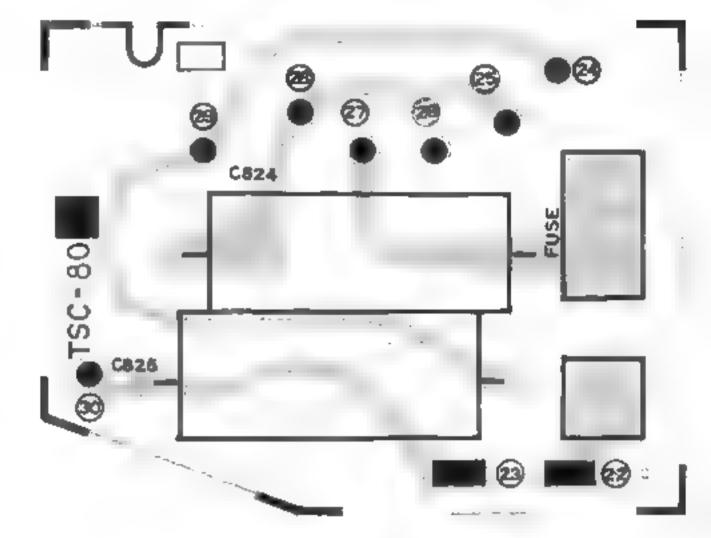



Fig. 24 TSC-80F

Fig. 25 TSC-80GBS


Item No.	Description	TSC-80F for Australia and Europe	TSC-80GBS for U.K.
C824	O.F.T. Capacitor (0.047 μF/450 V)	QFZ9007-473	QFZ9007-473BS
C825	(")	_	QFZ9007-473BS
	Fuse (Primary) 🛆	QMF51A2-R125	QMF51A2-R125BS
		(0.125 AT)	(0.125 AT)
	Fuse Clip	E48965-002	E48965-002
	Fuse Label	E61381-002	E61381-002
	P.C. Board (Plain)	E34924-001	E34924-003

NOTE A : SAFETY PARTS


QL-5 Schematic Diagram

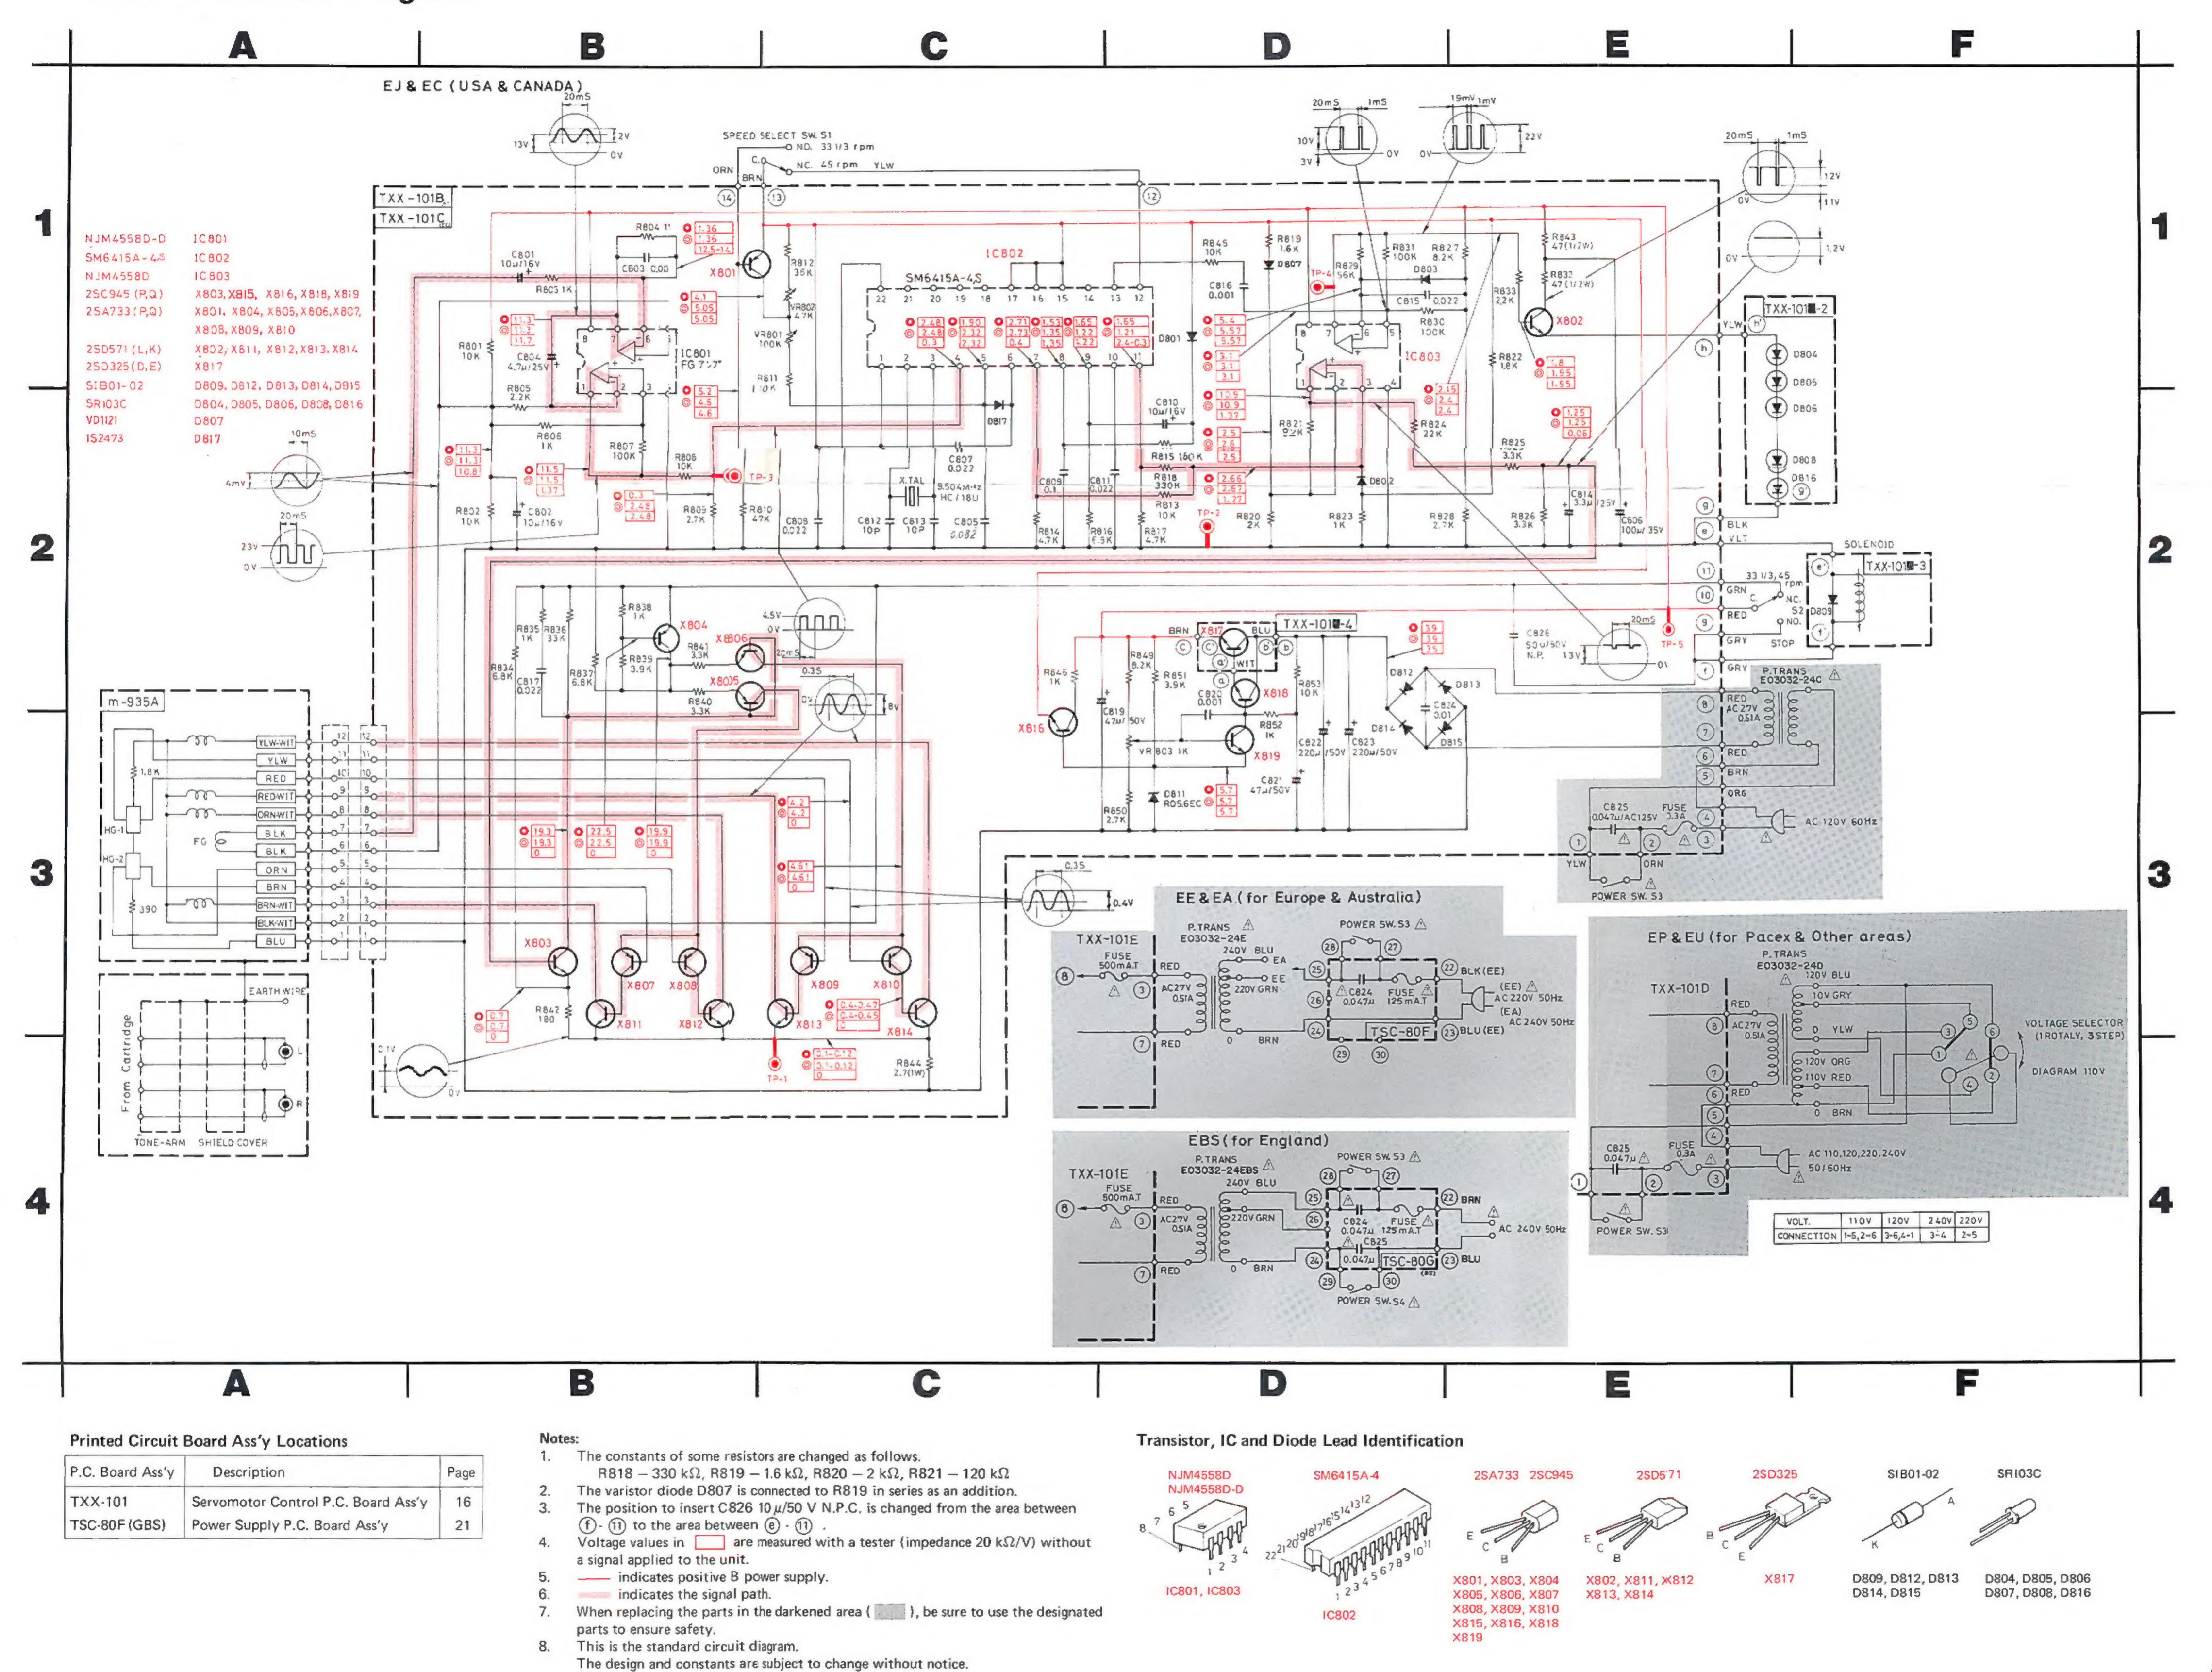

TXX-101 Servomotor Control P. C. Board Ass'y

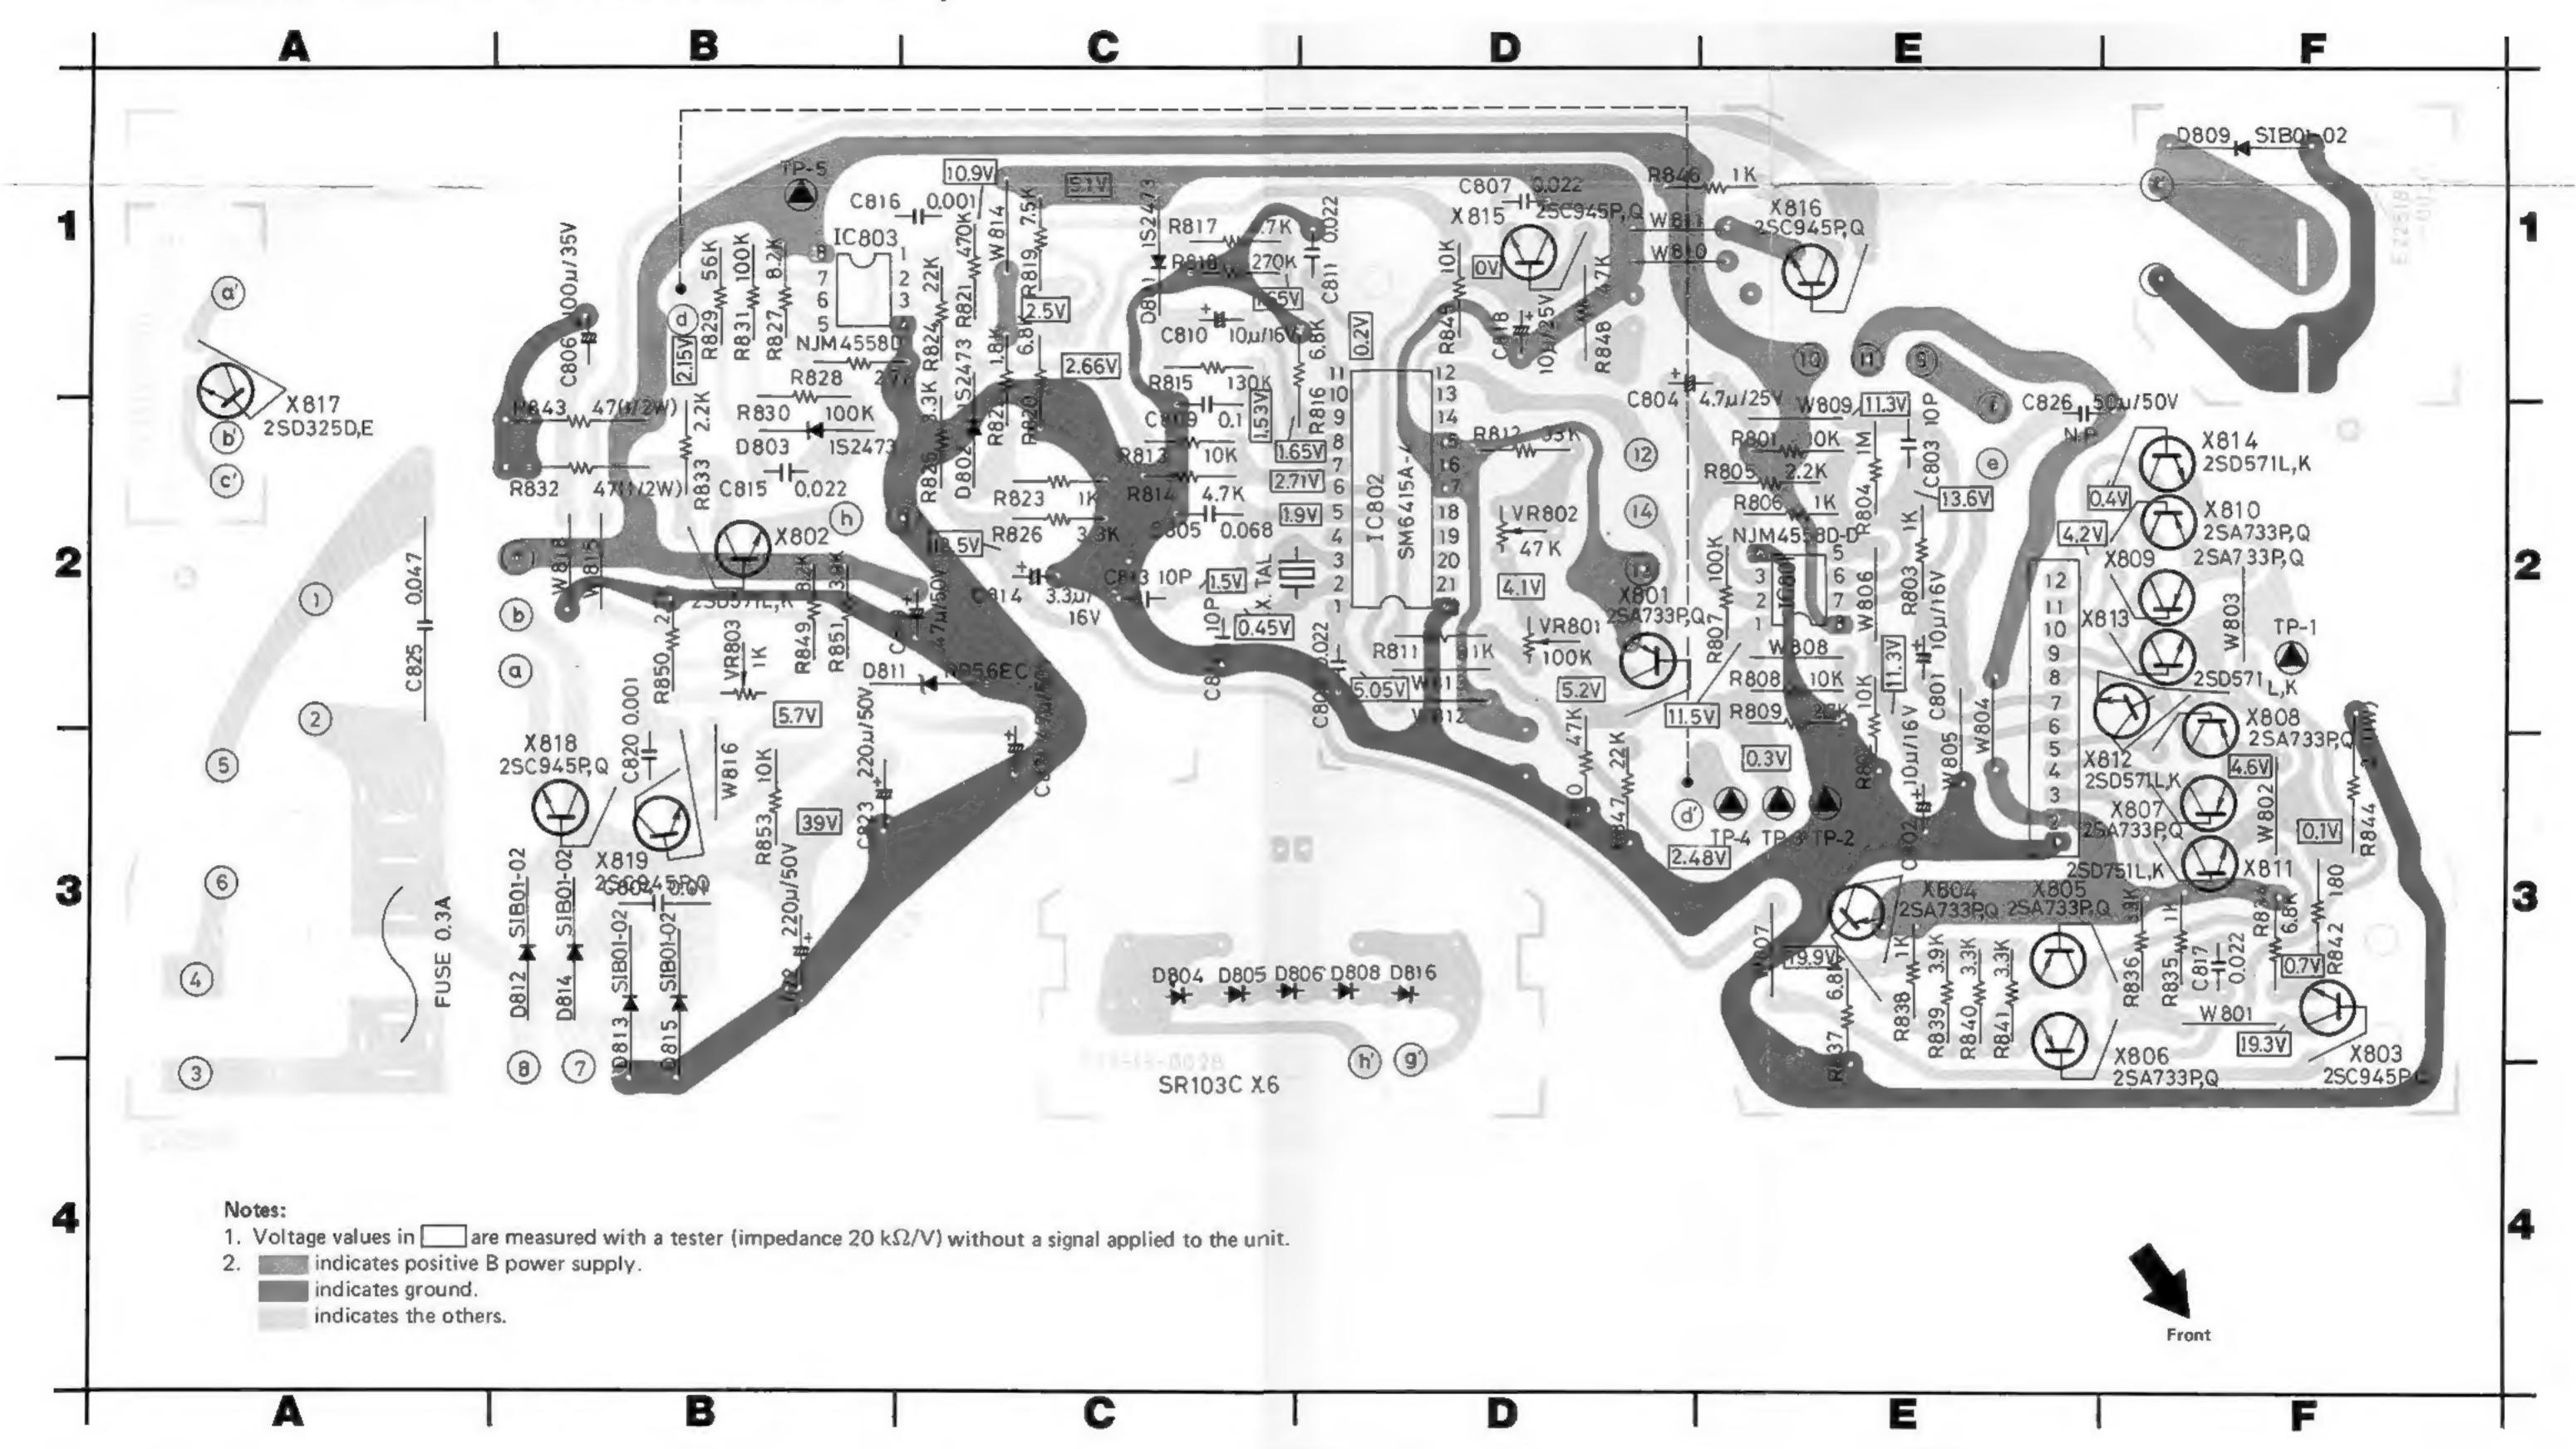

13. Packing Materials and Part Numbers

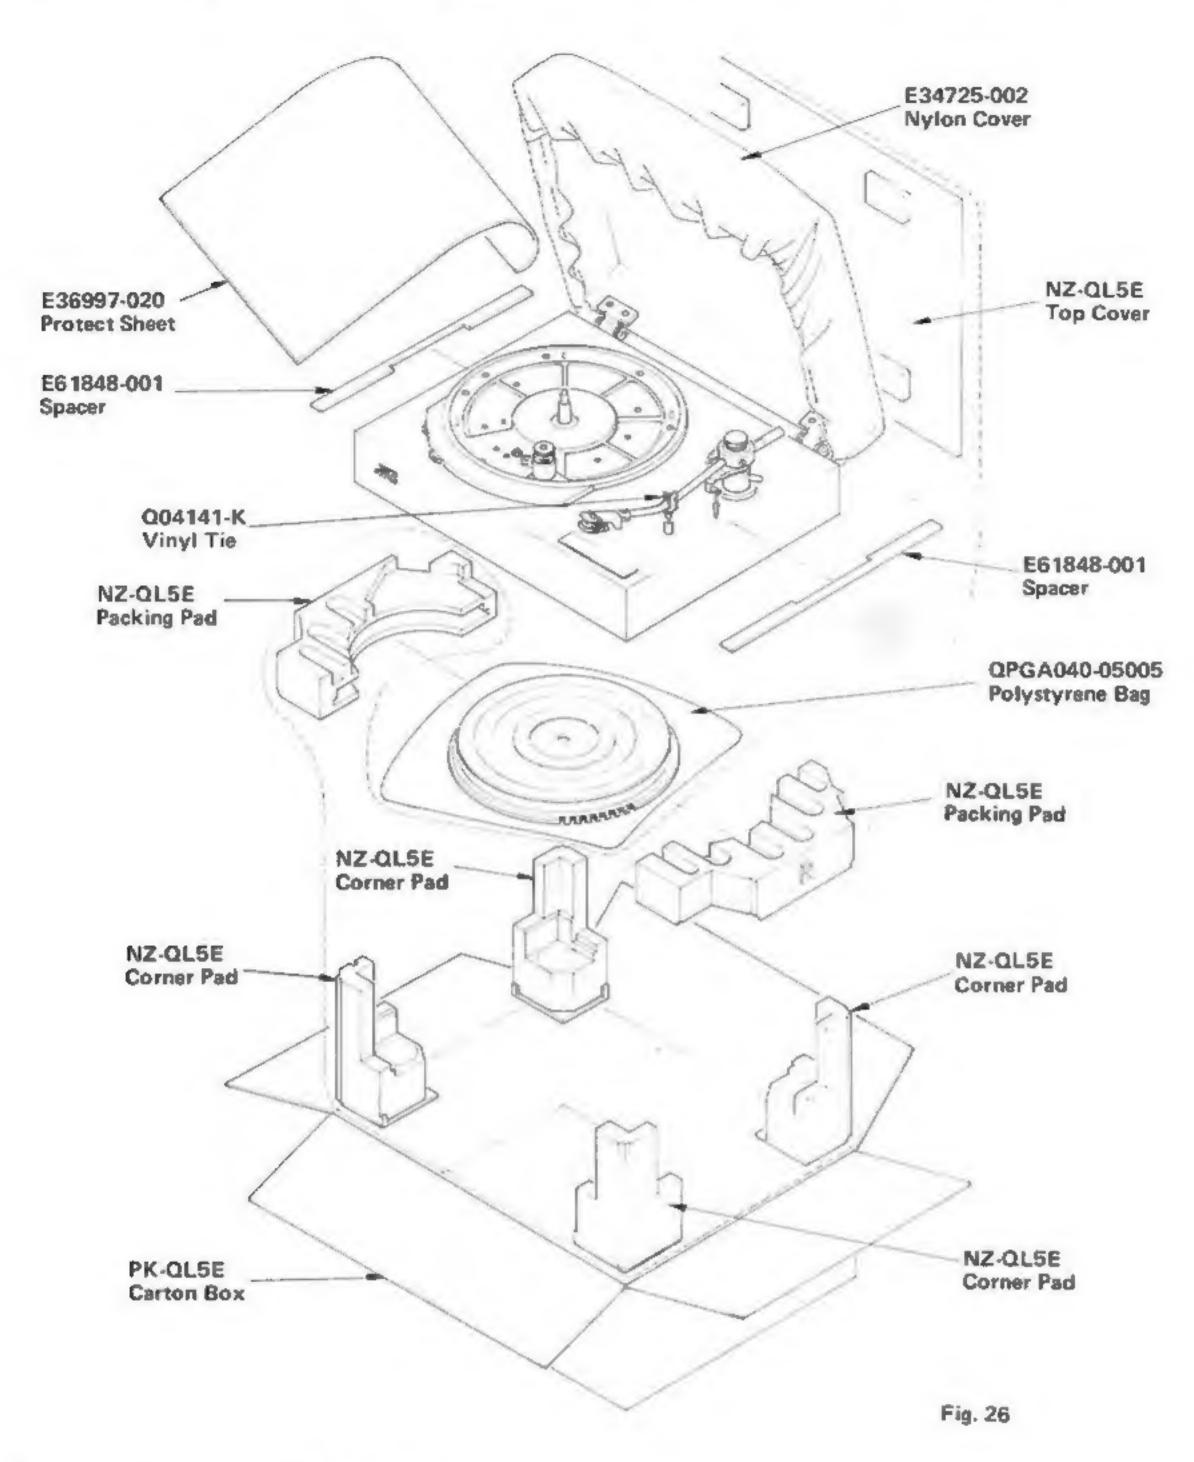

14. Accessories List

tem No. Part Number		Description	Q'ty			
1	E30580-642A	Instruction Book	1			
2	See below	Warranty Card	1			
3	E48820-001	EP Adaptor	1			
4	E64207-001	Envelope for Instruction Book and Others	1			
5	E60259-002	Overhang Indicator				
6	E04056	Simens Plug (for Other Countries)				
7	BT20023	Service Procedures (for U.S.A. only)				
8	BT20024B	Special Reply Card (for U.S.A. only)	1			

Warranty Card

Item No.	Description	U.S.A.	Canada	Europe	U.K.	Australia	U.S. Military Market
2	Warranty Card	BT20032	BT20025B	Not enclosed	BT20013B	BT20029	BT20014B

JVC

VICTOR COMPANY OF JAPAN, LIMITED, TOKYO, JAPAN

